

## The PUSH button colourful range of rubber covers is splash-proof for outdoor installation and use and to suit your PUSH.

## PUSH BUTTON

The push button is an all-round easy-to-use control, be it for switching camera recordings on and off or to communicate a custom message via voice output. Fixed or mobile: the cordless and battery-operated Push button can be placed anywhere it is needed or even carried around, as long as it stays within reach of the Gateway.

- A simple to use remote control to control the functions of sensors and cameras, e.g. recording start/stop.
- Ask the status of all sensors.
- Use with the rubber cover Accessory to use your PUSH outside and make it splash-proof (IP44).

16 www.homeok365.com 17