




CLEANING INSTRUCTIONS

- Wash thoroughly before first use.
- Lid and bottle are top-rack dishwasher safe.
- To wash by hand, soak the lid for 10 minutes in hot, soapy water. Wash the bottle with warm water and mild detergent. Rinse the lid and bottle thoroughly before use.
- Clean the battery with a damp cloth, while port cover is closed.
- Always store the bottle with the lid removed to allow the parts to completely dry.

CAUTION

- Careful. The beverage you are about to enjoy may be very hot. Always use caution.
- DO NOT wash battery. Always unscrew the battery when washing the bottle.
- If filling with boiling liquid, allow liquid to cool with the lid OFF for at least 3 minutes.
- DO NOT microwave or freeze.
- DO NOT use harsh chemicals to clean the bottle or battery such as bleach, chlorine and/or abrasives.

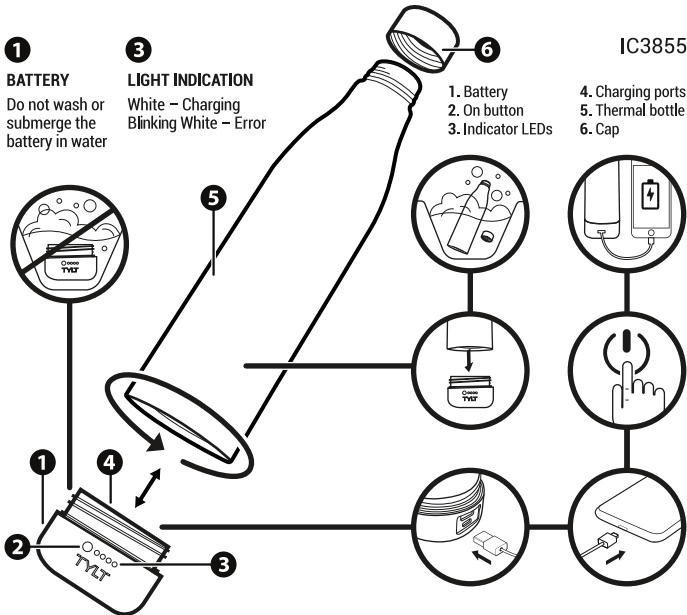

IC3855