

Created 3/26/2014

Avionic Instruments Publication Index

Model Number	Company	Manual Type	Manual #	ATA #	Revision	Date
1A250- ()	Avionic Instruments	CMM	1-001-4902-0001	24-20-01	3	3/1/1989
1A350- ()	Avionic Instruments	CMM	1-001-4902-0005	24-20-01	2	9/4/1984
1A700- ()	Avionic Instruments	CMM	1-001-4902-0002	24-20-02	6	2/1/1981
1A2500- ()	Avionic Instruments	CMM	1-001-4902-0003	24-20-03	1	8/1/1994
1A1000- ()	Avionic Instruments	CMM	1-001-4902-0004	24-20-04	2	10/1/1991
1A50-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
2A50-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
3A50-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
1A125-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
2A125-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
3A125-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
1B250-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
2A250-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
3A250-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
1B350-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
2A350-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
3A350-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
1B375-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
2A375-()	Avionic Instruments	CMM	1-001-4902-0006	24-20-07	30	12/26/2007
1B800-1G	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
1B800-1GLN-1001	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
1B1000-1G	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
1B1000-1GS	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
1B1000-1G-RR-901	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
2A800-1G	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
2A1000-1G	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
2A1000-1G-RR-1657	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
2A1000-1AL	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
3A1000-1G	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
1B800-1D-1	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
1B1000-1D-1	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
1B1000-1G-AM-912	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
1B1000-1GJ-2044	Avionic Instruments	CMM	1-001-4902-0007	24-20-08	30	3/14/2011
4A1000-()	Avionic Instruments	CMM	1-001-4902-0009	24-20-09	6	8/23/2019
PC-15 ()	Flitetronics	CMM	-	24-20-21	9	2/28/76
1C1000-1A	Avionic Instruments	CMM	1-001-4902-0013	24-20-23	5	01/20/2017
PC-17A	Flitetronics	CMM	-	24-20-26	9	1/31/83
1C1000-1B (-7)	Avionic Instruments	CMM	1-001-4902-0017	24-20-27	16	01/20/2017
1C1000-1C-1000	Avionic Instruments	CMM	1-001-4902-0017	24-20-27	16	01/20/2017
2A700-1A-1A	Avionic Instruments	CMM	1-001-4902-0018	24-20-28	ORIG	9/30/1990
3A700-1A-1A	Avionic Instruments	CMM	1-001-4902-0018	24-20-28	ORIG	9/30/1990
1C2400-1A	Avionic Instruments	CMM	1-001-4902-0021	24-20-32	3	6/22/1995
1C2400-1AS	Avionic Instruments	CMM	1-001-4902-0020	24-20-50	2	11/22/1995
1G1000-1A-2170	Avionic Instruments	CMM	1-001-4902-0052	24-20-52	16	2/12/2021
LDP375-5C-788	Avionic Instruments	CMM	1-001-4902-0024	24-20-58	5	4/29/2008
LDF50-5-784	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDP70-12-817	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDF75-5-542	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDF100-28-818	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDP50-5-742	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDP70-12-811	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDP100-28A	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDP75-5-781	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDP100-28-812	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDV50-5-813	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDV70-12-814	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDV75-5-816	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDV100-28-815	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997

LDP50-5	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
LDP50-5A-1002	Avionic Instruments	CMM	1-001-4902-0025	24-20-59	3	9/29/1997
4A4000-1A	Avionic Instruments	CMM	1-001-4902-0010	24-20-62	6	08/23/2019
4A4000-1B	Avionic Instruments	CMM	1-001-4902-0010	24-20-62	6	08/23/2019
4A3000-1B-100	Avionic Instruments	CMM	1-001-4902-0010	24-20-62	6	08/23/2019
4A3000-1B-1002058	Avionic Instruments	CMM	1-001-4902-0010	24-20-62	6	08/23/2019
4A4000-1A-HRP	Avionic Instruments	CMM	1-001-4902-0010	24-20-62	6	08/23/2019
4A4000-1B-HRP	Avionic Instruments	CMM	1-001-4902-0010	24-20-62	6	08/23/2019
4A4000-1C-HRP	Avionic Instruments	CMM	1-001-4902-0010	24-20-62	6	08/23/2019
3A250-1A-1	Avionic Instruments	CMM	1-001-4902-0027	24-20-63	6	7/19/2004
1A500-1A-1/E786	Avionic Instruments	CMM	1-001-4902-0027	24-20-63	6	7/19/2004
2A500-1A-1	Avionic Instruments	CMM	1-001-4902-0027	24-20-63	6	7/19/2004
3A500-1A-1	Avionic Instruments	CMM	1-001-4902-0027	24-20-63	6	7/19/2004
3A500-1A-1-RR	Avionic Instruments	CMM	1-001-4902-0027	24-20-63	6	7/19/2004
1A700-1B-2	Avionic Instruments	CMM	1-001-4902-0027	24-20-63	6	7/19/2004
3A700-1A-1	Avionic Instruments	CMM	1-001-4902-0027	24-20-63	6	7/19/2004
1B700-1B-1	Avionic Instruments	CMM	1-001-4902-0027	24-20-63	6	7/19/2004
4B2000-()	Avionic Instruments	CMM	1-001-4902-0026	24-20-67	11	1/30/2013
4B3500-()	Avionic Instruments	CMM	1-001-4902-0026	24-20-67	11	1/30/2013
1C1200-1A-780	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
1D1200-1A-1025	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
2D1200-1A-1011	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
3D1200-1A-1012	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
2D1200-1B-1013	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
3D1200-1B-1014	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
1D1000-1A-1015	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
2D1000-1A-1016	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
3D1000-1A-1017	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
2D1000-1B-1018	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
3D1000-1B-1019	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
1D800-1A-1020	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
2D800-1A-1021	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
3D800-1A-1022	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
2D800-1B-1023	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
3D800-1B-1024	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
1D1200-2A-1027	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
2D1200-2A-1028	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
3D1200-2A-1029	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
2D1200-2B-1030	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
3D1200-2B-1031	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
1D1000-2A-1032	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
2D1000-2A-1033	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
3D1000-2A-1034	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
2D1000-2B-1035	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
3D1000-2B-1036	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013
1D800-2A-1037	Avionic Instruments	CMM	1-001-4902-0029	24-20-68	3	3/5/2013

1A3000-1A-190	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
1A3000-1A-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
1A3000-1B	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
1A3000-1B-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
2A1600-1A-1-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
2A2000-1A-1	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
1A2000-1A-1-HR-1401	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
2A2000-1A-1-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
2A2400-1A-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
2A2400-1B-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
2A3000-1A	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
2A3000-1A-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
2A3000-1A-HR-A	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
2A3000-1B	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
2A3000-1B-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
3A1000-1D-1	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
3A1000-1D-1-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
3A1600-1A-1-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
3A1600-1A-1-HR-A-1326	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
3A2000-1A-1	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
3A2000-1A-1-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
3A2000-1B-1-HR	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
2D3000-1B-PH-1896	Avionic Instruments	CMM	1-001-4902-0011	24-20-73	8	12/03/2010
4D1000-B604-1659	Avionic Instruments	CMM	1-001-4902-0030	24-20-74	ORIG	1/29/1996
1A40-2C26-1653	Avionic Instruments	CMM	1-001-4902-0031	24-20-76	1	5/24/1996
XLDR300-3C-1544	Avionic Instruments	CMM	1-001-4902-0032	24-20-78	1	9/26/1996
4B3500-3A2201352	Avionic Instruments	CMM	1-001-4902-0033	24-20-79	9	05/02/2017
4B3500-3B1001755	Avionic Instruments	CMM	1-001-4902-0033	24-20-79	9	05/02/2017
4B3500-3H733	Avionic Instruments	CMM	1-001-4902-0033	24-20-79	9	05/02/2017
XLDP50-5-1179	Avionic Instruments	CMM	1-001-4902-0035	24-20-80	2	9/03/2013
XLDV50-5-1180	Avionic Instruments	CMM	1-001-4902-0035	24-20-80	2	9/03/2013
XLDR38-5-1229	Avionic Instruments	CMM	1-001-4902-0035	24-20-80	2	9/03/2013
XLDV38-5-1231	Avionic Instruments	CMM	1-001-4902-0035	24-20-80	2	9/03/2013
XLDR50-5-1233	Avionic Instruments	CMM	1-001-4902-0035	24-20-80	2	9/03/2013
XLD75-5-1245	Avionic Instruments	CMM	1-001-4902-0035	24-20-80	2	9/03/2013
XLDP75-5-1254	Avionic Instruments	CMM	1-001-4902-0035	24-20-80	2	9/03/2013
XLDR38-5-1342	Avionic Instruments	CMM	1-001-4902-0035	24-20-80	2	9/03/2013
1B250-1D-1/E793	Avionic Instruments	CMM	1-001-4902-0037	24-20-82	ORIG	2/18/1997
1B350-1B-1/E802	Avionic Instruments	CMM	1-001-4902-0037	24-20-82	ORIG	2/18/1997
1D600-1A-MD-0752	Avionic Instruments	CMM	1-001-4902-0039	24-20-87	3	1/02/2014
1D1200-1AE-2002	Avionic Instruments	CMM	1-001-4902-0040	24-20-88	2	12/8/2011
4C3500-1A-1943 Mod - through Mod H	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C3500-1A-NB-1959	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C3500-3B-1966	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C3500-3A-1968	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C3500-1A-NB-RR-1981	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C3500-1E-NB-1986	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C3500-1B-NB-1990	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C3500-3A-NBH-1991	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C3500-3BH-100-2007	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C3500-3A-NBH-2023	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C2200-3A-NB-2049	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C3500-GIVX-2052	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
4C3500-1A-NBH-100-2055	Avionic Instruments	CMM	1-001-4902-0041	24-20-89	6	4/29/2016
3C2500-1E-CM-758	Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
2C2500-1A-CM-774	Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
1C2500-1B-796	Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
2C2500-1A-797	Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
3C2500-1E-798	Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
2C2500-3E-799	Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
3C2500-2E-800	Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
1C2500-1B-CM-801	Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010

2C2500-3E-CM-804
3C2500-2E-CM-805
2C2500-1A-CM-1206
1C2500-1K-1211
1C2000-1H-1265
2C2000-1E-1266
3C2000-1E-1267
2C2000-3E-CM-1306
1C2500-1C-1578
1C2500-1H-1601
2C2500-1E-1602
2C2500-1E-CM-1603
1C2500-1H-CM-1629
RTR3360-1A/E-2020
TRU11200-SK-2039
TRU11200-SK-2309
1E1500-1A-1922
1A50-2C-115/E2043
1A44-2C-1829
TRU1400-1C-1906
TRU8400-1A-1009
TRU3500-1B-1448
TRU3500-1A-1573
TRU11200-1A-1583
TRU1400-1B-1644
TRU5600-1A-1877
TRU4200-1B-1883
TRU11200-1A-1889
TRU14000-1A-1948
TRU14000-1A-HW-2095
TRU3025-SK-2036
TRU1400-RD-1907
TRU1400-T38-1874
TRU2100-1B-1763
TRU5600-1C-1670
TRU5600-MLM-1823
TRU5600-1E-1780
TRU3360-1B-1577
TRU2100-LM-2153
TRU1400-1C-1933
1E600-1E-2021
MWC-UH60M-2056
IBVSU-2C-2063
1G500-1A-2173
1G500-1A-2573
4B3500-GV-1723
2G2000-1A-2161
2G2000-1A-2400
4C3500-1A-1943 Mod K and later
4H3500-1A-NB-2333
4H3500-1A-SK-2334
4H3500-1A-2335
4H3500-4E-NB-2350
4H3500-1A-MV-2359
4H3500-H47-2386
4H3500-1A-2408
4H3500-1A-2409
4H3500-GIVX-2444
TRU2100-1B-2326
3G2000-1B-2389
1C1000-1C-2090
4H3500-1A-NB-RR-2456

Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0038	24-20-93	1	6/21/2010
Avionic Instruments	CMM	1-001-4902-0042	24-20-94	4	9/14/2012
Avionic Instruments	CMM	1-001-4902-0043	24-20-95	1	8/31/2010
Avionic Instruments	CMM	1-001-4902-0043	24-20-95	1	8/31/2010
Avionic Instruments	CMM	1-001-4902-0044	24-20-96	1	7/28/2003
Avionic Instruments	CMM	1-001-4902-0045	24-20-97	1	12/06/2013
Avionic Instruments	CMM	1-001-4902-0045	24-20-97	1	12/06/2013
Avionic Instruments	CMM	1-001-4902-0046	24-20-99	ORIG	8/20/2003
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0047	24-20-A1	2	7/17/2009
Avionic Instruments	CMM	1-001-4902-0048	24-20-A2	ORIG	3/18/2005
Avionic Instruments	CMM	1-001-4902-0049	24-20-A3	ORIG	11/11/2005
Avionic Instruments	CMM	1-001-4902-0050	24-20-A4	A	4/24/2018
Avionic Instruments	CMM	1-001-4902-0051	24-20-A6	2	11/15/2017
Avionic Instruments	CMM	1-001-4902-0051	24-20-A6	2	11/15/2017
Avionic Instruments	CMM	1-001-4902-0054	24-20-A7	ORIG	8/20/2010
Avionic Instruments	CMM	1-001-4902-0055	24-20-A8	1	7/22/2011
Avionic Instruments	CMM	1-001-4902-0055	24-20-A8	1	7/22/2011
Avionic Instruments	CMM	1-001-4902-0056	24-20-A9	1	4/26/2016
Avionic Instruments	CMM	1-001-4902-0056	24-20-A9	1	4/26/2016
Avionic Instruments	CMM	1-001-4902-0056	24-20-A9	1	4/26/2016
Avionic Instruments	CMM	1-001-4902-0056	24-20-A9	1	4/26/2016
Avionic Instruments	CMM	1-001-4902-0056	24-20-A9	1	4/26/2016
Avionic Instruments	CMM	1-001-4902-0056	24-20-A9	1	4/26/2016
Avionic Instruments	CMM	1-001-4902-0056	24-20-A9	1	4/26/2016
Avionic Instruments	CMM	1-001-4902-0056	24-20-A9	1	4/26/2016
Avionic Instruments	CMM	1-001-4902-0056	24-20-A9	1	4/26/2016
Avionic Instruments	CMM	1-001-4902-0057	24-20-B2	4	12/11/2015
Avionic Instruments	CMM	1-001-4902-0058	24-20-B4	ORIG	3/25/2013
Avionic Instruments	CMM	1-001-4902-0061	24-21-01	18	02/09/2021
Avionic Instruments	CMM	1-001-4902-0062	24-21-02	ORIG	4/23/2014

[illegible]

[illegible]

3A700-1A-1	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1A750-1A	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1B700-1B-1	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
2A750-1A	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1A1050-1A	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1A1050-1D-1581	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
2A1050-1A	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1A1125-1A-137	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1A375-1A-1574	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1A750-1AN-778	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1A1050-1A-M	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1A1050-1AN-1739	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1A437-1D-1884	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1A700-1A-1	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
1A1050-1A-158/178-2484	Avionic Instruments	INSTALL MANUAL	1-001-4901-0016	24-20-18	17	6/16/2014
4A1000-1C-1-HRP	Avionic Instruments	INSTALL MANUAL	1-001-4901-0018	24-20-19	4	10/25/1994
4A1000-1C-HRPI-1007	Avionic Instruments	INSTALL MANUAL	1-001-4901-0018	24-20-19	4	10/25/1994
4A2000-1B-1-HRP	Avionic Instruments	INSTALL MANUAL	1-001-4901-0018	24-20-19	4	10/25/1994
4A3000-1A-HRP	Avionic Instruments	INSTALL MANUAL	1-001-4901-0018	24-20-19	4	10/25/1994
4A3000-1B1-HRP-SP	Avionic Instruments	INSTALL MANUAL	1-001-4901-0018	24-20-19	4	10/25/1994
4A3000-1C-HRP	Avionic Instruments	INSTALL MANUAL	1-001-4901-0018	24-20-19	4	10/25/1994
1B800-1G	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
1B800-1GU	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
1B800-1GLN-1001	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
1B1000-1G	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
1B1000-1G-AM-912	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
1B1000-1GS	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
1B1000-1G-RR-901	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
1B1000-1GU	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
1B1000-1GW	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
1B1000-1GK8-1891	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
1B1000-1GY7	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
2A800-1G	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
2A800-1G-100	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
2A1000-1G	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
2A1000-1G-RR-1657	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
2A1000-1AL	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
2A1000-1G-100	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
3A800-1G	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
3A800-1G-100	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
3A1000-1G	Avionic Instruments	INSTALL MANUAL	1-001-4901-0020	24-20-20	17	7/03/2003
4A4000-1B	Avionic Instruments	INSTALL MANUAL	1-001-4901-0019	24-20-24	4	4/12/1996
4A4000-1A	Avionic Instruments	INSTALL MANUAL	1-001-4901-0019	24-20-24	4	4/12/1996
4A4000-1A-HRP	Avionic Instruments	INSTALL MANUAL	1-001-4901-0019	24-20-24	4	4/12/1996
4A4000-1B-HRP	Avionic Instruments	INSTALL MANUAL	1-001-4901-0019	24-20-24	4	4/12/1996
4A4000-1C-HRP	Avionic Instruments	INSTALL MANUAL	1-001-4901-0019	24-20-24	4	4/

4B3500-1C	Avionic Instruments	INSTALL MANUAL	1-001-4901-0049	24-20-31	18	2/14/2001
4B3500-1C-CM-771	Avionic Instruments	INSTALL MANUAL	1-001-4901-0049	24-20-31	18	2/14/2001
4B3500-1C-NB-908	Avionic Instruments	INSTALL MANUAL	1-001-4901-0049	24-20-31	18	2/14/2001
4B3500-1C-NB-CM-1064	Avionic Instruments	INSTALL MANUAL	1-001-4901-0049	24-20-31	18	2/14/2001
4B3500-1D-1588	Avionic Instruments	INSTALL MANUAL	1-001-4901-0049	24-20-31	18	2/14/2001
4B3500-2E-GXL-1912	Avionic Instruments	INSTALL MANUAL	1-001-4901-0049	24-20-31	18	2/14/2001
4B3500-3E-GXL-1913	Avionic Instruments	INSTALL MANUAL	1-001-4901-0049	24-20-31	18	2/14/2001
4B3500-GV-1723	Avionic Instruments	INSTALL MANUAL	1-001-4901-0049	24-20-31	18	2/14/2001
4B3500-XL2A-1327	Avionic Instruments	INSTALL MANUAL	1-001-4901-0049	24-20-31	18	2/14/2001
4B3500-2A-730	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3E-731	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2B-732	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3H733	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-4E-803	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-4A-806	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-2E-807	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-3E-808	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-2H-809	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-3H-810	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2A-CM-834	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3E-CM-835	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-4E-CM-836	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2H-CM-837	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3H-CM-838	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-2E-CM-839	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-3E-CM-840	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-2H-CM-841	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-3H-CM-842	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-4E-CM-898	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2E-100-902	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-3H-NB-100-1010	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2A-NB-CM-1065	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3A-NB-CM-1066	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-4E-NB-CM-1067	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2H-NB-CM-1068	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3H-NB-CM-1069	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2A-NB-1072	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3E-NB-1073	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2H-NB-1074	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3H-NB-1075	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-4E-NB-1076	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-2E-NB-1079	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-3E-NB-1080	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-2H-NB-1081	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008

4B3500-2A-NB-RR-1567	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3H-NB-100-1571	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2H-220-1594	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2E-CM-1599	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2E-NB-CM-1600	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3E-NB-CM-1605	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2E-1606	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2E-NB-1607	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2H-1608	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-4E-1609	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-GIV-1610	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-GIV-1611	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2E-240-1612	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3E-220-1613	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-2E-CM-100-1614	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-3H-CM-100-1615	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2E-NB-RR-1616	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-2E-NB-RR-1702	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2E-GX-1712	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3E-GX-1713	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-4E-NB-CM-1720	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-2E-GIV-100-1752	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3H-GIV-100-1753	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3B1001755	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-4E-1727	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-4E-CM-1728	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3H-100-1771	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B3500-3H-1772	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
4B2000-4E-NB-CM-HW-2093	Avionic Instruments	INSTALL MANUAL	1-001-4901-0056	24-20-47	32	6/10/2008
2C2500-1A-CM-774	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
1C2500-1B-796	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
2C2500-1A-797	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
3C2500-1E-798	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
2C2500-3E-799	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
3C2500-2E-800	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
1C2500-1B-CM-801	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
3C2500-1E-CM-758	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
2C2500-3E-CM-804	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
3C2500-2E-CM-805	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
2C2500-1A-CM-1206	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
1C2000-1H-1265	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
2C2000-1E-1266	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
2C2000-1E-L3-2109	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
3C2000-4E-1267	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
2C2000-3E-1268	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
3C2000-2E-1269	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
1C2000-1H-CM-1303	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
2C2000-1E-CM-1304	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
3C2000-1E-CM-1305	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
2C2000-3E-CM-1306	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
3C2000-2E-CM-1307	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
1C2500-1H-1601	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
2C2500-1E-1602	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
2C2500-1E-CM-1603	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
1C2500-1H-CM-1629	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
1C2500-1C-1578	Avionic Instruments	INSTALL MANUAL	1-001-4901-0057	24-20-48	18	6/13/2005
1A500-1A-1/E786	Avionic Instruments	INSTALL MANUAL	1-001-4901-0055	24-20-49	2	3/31/1994
1A750-1AE-830	Avionic Instruments	INSTALL MANUAL	1-001-4901-0055	24-20-49	2	3/31/1994
1A1050-1A/E787	Avionic Instruments	INSTALL MANUAL	1-001-4901-0055	24-20-49	2	3/31/1994
1PSM150-28-TP-128	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM150-12-952	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM150-15-958	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998

1PSM150-24-959	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM150-28-960	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM150-48-961	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM150-5-956	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM300-15-TP-1555	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM300-24-TP-1565	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM300-28-TP-1556	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM300-12-765	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM300-15-641	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM300-24-954	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM300-28-792	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM300-48-955	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM300-5-748	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1PSM300-12-MD-1328	Avionic Instruments	INSTALL MANUAL	1-001-4901-0059	24-20-53	6	3/04/1998
1C1000-1C-1000	Avionic Instruments	INSTALL MANUAL	1-001-4901-0060	24-20-55	1	11/13/2003
1C1000-1C-2062	Avionic Instruments	INSTALL MANUAL	1-001-4901-0060	24-20-55	1	11/13/2003
LDP375-5C-788	Avionic Instruments	INSTALL MANUAL	1-001-4901-0062	24-20-57	2	8/10/1994
1D1200-1A-1025	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
1D1200-1A-1928	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
2D1200-1A-1011	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
3D1200-1A-1012	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
2D1200-1B-1013	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
3D1200-1B-1014	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
1D1000-1A-1015	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
2D1000-1A-1016	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
3D1000-1A-1017	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
2D1000-1B-1018	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
3D1000-1B-1019	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
1D800-1A-1020	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
2D800-1A-1021	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
3D800-1A-1022	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
2D800-1B-1023	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
3D800-1B-1024	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
1D1200-2A-1027	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
2D1200-2A-1028	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
1D1000-1ATR-1785	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
2D1200-2A-100-2103	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
3D1200-2A-1029	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
2D1200-2B-1030	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
3D1200-2B-1031	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
1D1000-2A-1032	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
2D1000-2A-1033	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
3D1000-2A-1034	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006
2D1000-2B-1035	Avionic Instruments	INSTALL MANUAL	1-001-4901-0065	24-20-64	24	11/27/2006

XLDR50-5-1233	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDP50-5-1234	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDV50-5-1235	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDF50-5-1236	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDF50-12-1240	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDF70-12-1566	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDF210-12-1879	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDR65-5-1776	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDF100-28-1711	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDF240-12-2048	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDF70-21-2074	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDR70-28-1241	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDP70-28-1242	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDV70-28-1243	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDR70-28B-1927	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLD75-5-1245	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLD75-5A-1246	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLD75-5B-1247	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLD75-5F-1248	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDP75-5-1254	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDR38-5-1342	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDP100-28-1708	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDV75-5-1255	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDFD80-16-2040	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDF70-19-1999	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDF70-19-2008	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDV100-28EB-2399	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDR100-28-1710	Avionic Instruments	INSTALL MANUAL	1-001-4901-0067	24-20-66	15	02/06/2018
XLDR300-3C-1544	Avionic Instruments	INSTALL MANUAL	1-001-4901-0070	24-20-71	1	6/20/2006
XLDR300-3C-EB-2104	Avionic Instruments	INSTALL MANUAL	1-001-4901-0070	24-20-71	1	6/20/2006
TRU8400-1A-1009	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU3500-1B-1448	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU3500-1A-1573	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU11200-1A-1583	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU1400-1B-1644	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU5600-1C-1670	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU5600-1A-1877	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU4200-1B-1883	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU11200-1A-1889	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU3025-SK-2036	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU14000-1A-1948	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU14000-1A-HW-2095	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU3025-SK-2036	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU3500-NM-2397	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU1400-T38-1874	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU11200-1A-2313	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU3500-1A-2317	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
TRU2600-270VDC-2542	Avionic Instruments	INSTALL MANUAL	1-001-4901-0071	24-20-75	13	9/25/2020
1A40-2C26-1653	Avionic Instruments	INSTALL MANUAL	1-001-4901-0068	24-20-77	1	3/18/1996
TRU1400-1C-1906	Avionic Instruments	INSTALL MANUAL	1-001-4901-0075	24-20-85	5	04/20/2017
TRU1400-RD-1907	Avionic Instruments	INSTALL MANUAL	1-001-4901-0075	24-20-85	5	04/20/2017
TRU2100-1B-1763	Avionic Instruments	INSTALL MANUAL	1-001-4901-0075	24-20-85	5	04/20/2017
TRU2100-1B-2500	Avionic Instruments	INSTALL MANUAL	1-001-4901-0075	24-20-85	5	04/20/2017
4C2000-1A-1955	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C2000-1A-NB-1956	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C2000-1B-1957	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C2000-1B-NB-1958	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C2000-3A-1962	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C2000-3A-NB-1963	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C2000-3B-1964	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C2000-3B-NB-1965	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1A-1943	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010

4C3500-1B-NB-1990	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1AH-1994	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1A-NB-1959	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-3B-1966	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-3B-NB-1967	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-3A-1968	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-3A-NB-1969	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-3AH-1993	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-3A-NBH-1991	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1B-1960	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1B-NB-1961	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1E-NB-1986	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1A-NB-RR-1981	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1E-NB-RR-1987	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-3BH-100-2007	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-3A-NBH-2023	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-GIVX-2052	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1A-NBH-100-2055	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-4E-NB-2064	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-2A-NBH-RR-2101	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1A-NB-WL-2110	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C2200-3A-NB-2049	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1E-NB-2069	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1E-NB-2111	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-3A-220-NBH-2126	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-1A-SK-2130	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-2E120-ABL-2138	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-3E-2141	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-2A-NBH-2144	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-2E-2150	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
4C3500-4E-NBH-2190	Avionic Instruments	INSTALL MANUAL	1-001-4901-0077	24-20-86	20	11/24/2010
RTR5600-1A-2014	Avionic Instruments	INSTALL MANUAL	1-001-4901-0079	24-20-90	16	10/21/2016
RTR3360-1A/E-2020	Avionic Instruments	INSTALL MANUAL	1-001-4901-0079	24-20-90	16	10/21/2016
RTR5600-1A-1937	Avionic Instruments	INSTALL MANUAL	1-001-4901-0079	24-20-90	16	10/21/2016
RTR5600-1A-2492	Avionic Instruments	INSTALL MANUAL	1-001-4901-0079	24-20-90	16	10/21/2016
2E2000-1AC-1996	Avionic Instruments	INSTALL MANUAL	1-001-4901-0080	24-20-91	2	01/13/2006
2E1500-1A-1950	Avionic Instruments	INSTALL MANUAL	1-001-4901-0080	24-20-91	2	01/13/2006
1E1500-1A-1922	Avionic Instruments	INSTALL MANUAL	1-001-4901-0081	24-20-92	6	02/08/2018
1E1500-1C-1952	Avionic Instruments	INSTALL MANUAL	1-001-4901-0081	24-20-92	6	02/08/2018
1E1800-1A-1953	Avionic Instruments	INSTALL MANUAL	1-001-4901-0081	24-20-92	6	02/08/2018
1E1500-1A-2308	Avionic Instruments	INSTALL MANUAL	1-001-4901-0081	24-20-92	6	02/08/2018
1G1800-1A-2392	Avionic Instruments	INSTALL MANUAL	1-001-4901-0081	24-20-92	6	02/08/2018
1G1800-1A-2395	Avionic Instruments	INSTALL MANUAL	1-001-4901-0081	24-20-92	6	02/08/20

4H3500-1E-NB-2351	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-1E-NB-2354	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-2A-NBH-2358	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-2A-NBH-RR-2352	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-2A-NBLM-2473	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-2E120-ABL-2356	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-2E-2361	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-3A-220-NBH-2355	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-3A-2339	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-3AH-2344	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-3A-MV-2463	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-3A-NBH-2343	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-3A-NBH-2347	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-3B-2338	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-3BH-100-2346	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-3E-2357	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-4E-NB-2350	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-4E-NBH-2363	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-4E-NBHR-2364	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-GIVX-2444	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-H47-2386	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-4E-NB-RR-2456	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-4E-NB-RR-2458	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-3A-NBH-2503	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-1B-NB-2549	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
4H3500-3A-NBH-RT-2559	Avionic Instruments	INSTALL MANUAL	1-001-4901-0089	24-20-B3	11	3/02/2018
2D3600-2A-1430	Avionic Instruments	INSTALL MANUAL	1-001-4901-0092	24-20-B8	ORIG	12/17/2013
2A1000-1A	Avionic Instruments	INSTALL MANUAL	1-001-4901-0001	NA	6	6/28/1984
2A1000-1B	Avionic Instruments	INSTALL MANUAL	1-001-4901-0001	NA	6	6/28/1984
4H875-MOFC-2162	Avionic Instruments	INSTALL MANUAL	1-001-4901-0097	24-20-09	-	10/04/2017
4H875-MOFC-2447	Avionic Instruments	INSTALL MANUAL	1-001-4901-0097	24-20-09	-	10/04/2017
4H875-NG-2393	Avionic Instruments	INSTALL MANUAL	1-001-4901-0097	24-20-09	-	10/04/2017
3PH3000-2A	Avionic Instruments	INSTALL MANUAL	1-001-4901-0004	NA	2	12/1/1982
3PH3000-1B	Avionic Instruments	INSTALL MANUAL	1-001-4901-0004	NA	2	12/1/1982
3PH2400-1B	Avionic Instruments	INSTALL MANUAL	1-001-4901-0004	NA	2	12/1/1982
2A1000-1G-48	Avionic Instruments	INSTALL MANUAL	1-001-4901-0024	NA	ORIG	2/10/1989
1PS150-5	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1PS150-12	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1PS150-15	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1PS150-24	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1PS150-28	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1PS150-48	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1PS300-5	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1PS300-12	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1PS300-15	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1PS300-24	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1PS300-28	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1PS300-48	Avionic Instruments	INSTALL MANUAL	1-001-4901-0025	NA	4	6/30/1993
1A3000-1A-190	Avionic Instruments	INSTALL MANUAL	1-001-4901-0026	NA	ORIG	11/18/1988
1A2400-1A-190	Avionic Instruments	INSTALL MANUAL	1-001-4901-0026	NA	ORIG	11/18/1988
LDP50-5-742	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
LDP70-12-811	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
LDP100-28-812	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
LDV50-5-813	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
LDV70-12-814	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
LDV100-28-815	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
LDV75-5-816	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
LDP100-28A-824	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
LDP75-5-781	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
LDP50-5A-1002	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
LDP70-12A-1003	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
LDP100-28B-1004	Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995

LDF50-5-784
 LDF70-12-817
 LDF70-14-554
 LDF70-28-627
 LDF75-5-542
 LDF100-28-818
 LDF300-3C-28-1362
 LDF100-28G-1399
 LDP50-5
 2G10000-TVIS-2119
 4H3500-3A-MV-2463

1-001-0102-0068
 3A 1000-()
 2A 1000-()
 1B 1000-()
 1B 800-()
 PL14000-4H-1E-2659
 1-001-0102-0088
 1-002-0102-2027
 1-002-0102-0417
 1-002-0102-2058
 1-002-0102-2065

Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
Avionic Instruments	INSTALL MANUAL	1-001-4901-0052	NA	5	6/16/1995
Avionic Instruments	INSTALL MANUAL	1-001-4901-0085	NA	1	9/19/2007
Avionic Instruments	INSTALL MANUAL	1-001-4901-0091	NA	3	9/06/2013
Avionic Instruments	INTERMEDIATE MAINTENANCE	1-001-4902-0015	NA	ORIG	6/15/1991
Avionic Instruments	OVERHAUL MANUAL	1-001-4902-0008	NA	3	10/10/1983
Avionic Instruments	OVERHAUL MANUAL	1-001-4902-0008	NA	3	10/10/1983
Avionic Instruments	OVERHAUL MANUAL	1-001-4902-0008	NA	3	10/10/1983
Avionic Instruments	OVERHAUL MANUAL	1-001-4902-0008	NA	3	10/10/1983
Avionic Instruments	INSTALL MANUAL	1-001-4901-0100	24-21-12	-	6/3/2019
Avionic Instruments	CMM	1-001-4902-0089	24-21-29	0	8/23/2019
Avionic Instruments	CMM	1-001-4902-0090	24-21-30	0	8/23/2019
Avionic Instruments	CMM	1-001-4902-0091	24-21-31	0	8/23/2019
Avionic Instruments	CMM	1-001-4902-0091	24-21-31	0	8/23/2019
Avionic Instruments	CMM	1-001-4902-0050	24-21-32	A	03/03/2020