




## BORETRACE™ ATTACHMENT PROCEDURE

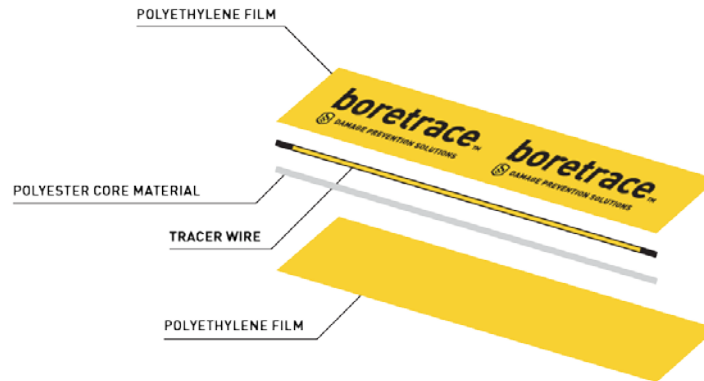

### ATTACHING BORETRACE TO THE BORE

1. Bundle boretrace film around core material (~5') and tape to form a rope like construct.
2. Use a **Figure 8 Loop Knot** or comparable high strength knot to tie the core material to the D-Ring.
3. Form a bight out of the bundled boretrace and cross the bight onto itself.
4. Wrap the bight for one full wrap.
5. Pull the end of the bight through the loop and pull hand tight.
6. Place the into the D-Ring and secure.
7. Use sidecutters to cut tracer wire through film just beyond the knot so no tension is applied to wire curing pull. \*Ensure not to damage core material.

