


Large Square Grid | No Spacing


Installation Instructions

This is going to be a snap!

Welcome to Spacekit! Congratulations on selecting a great look for your space. Let's get started!

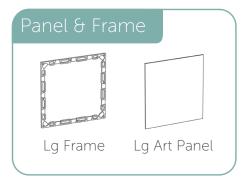



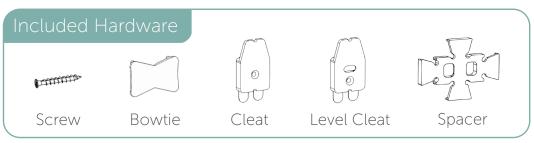



Getting Started: Adhesive Strips



Getting Started: Screws



Understanding How To Build



Finishing Your Kit

CONTENTS



Updating Your Layout



Disassembly & Removal: Adhesive Strips




Disassembly & Removal: Screws



Tips & Best Practices




Additional Configurations

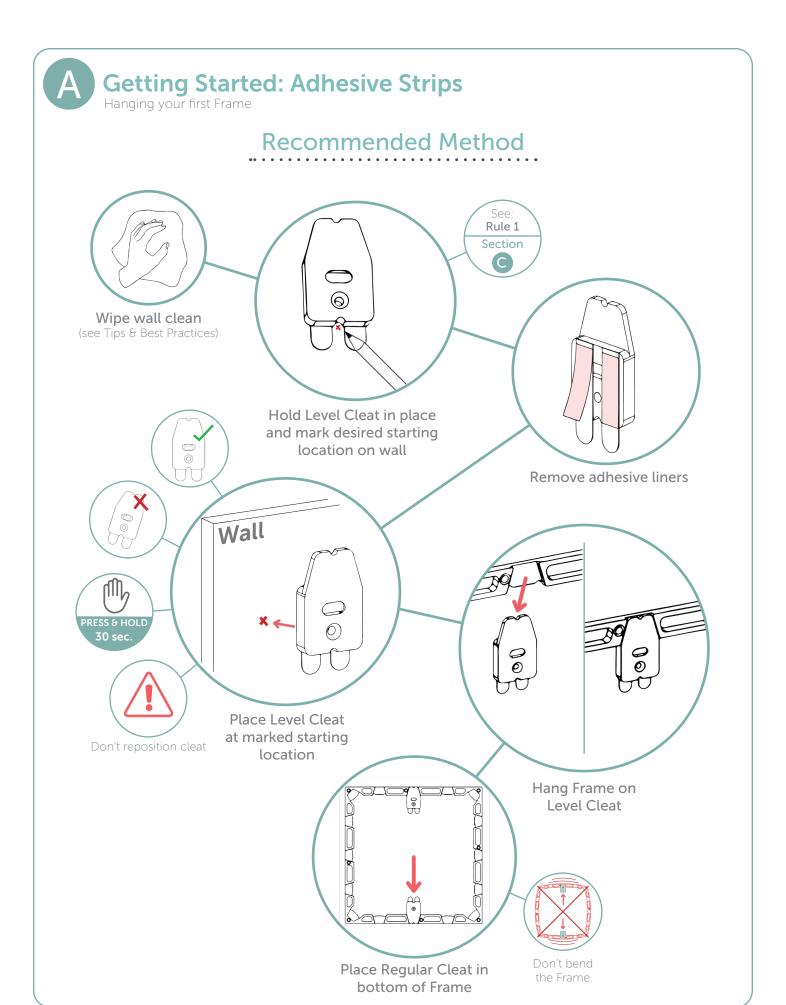


B Getting Started: Screws Hanging your first Frame

Optional Method

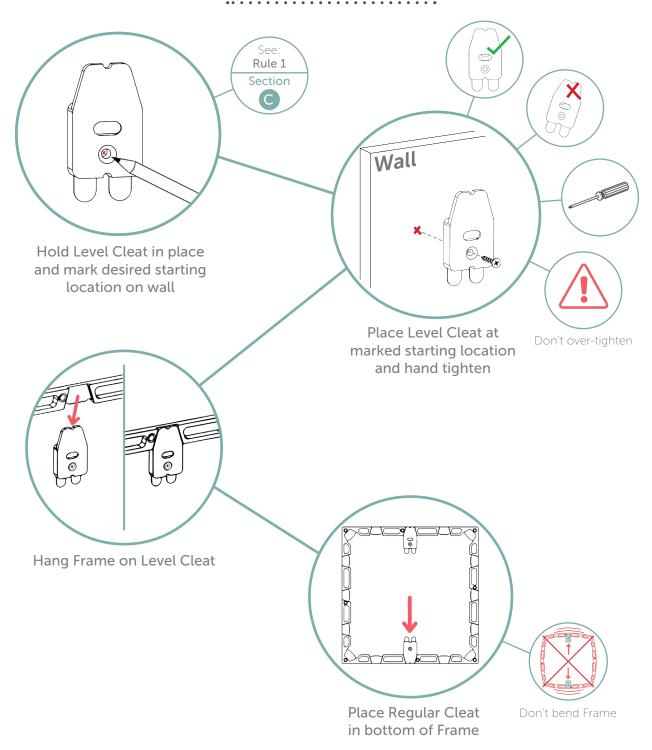



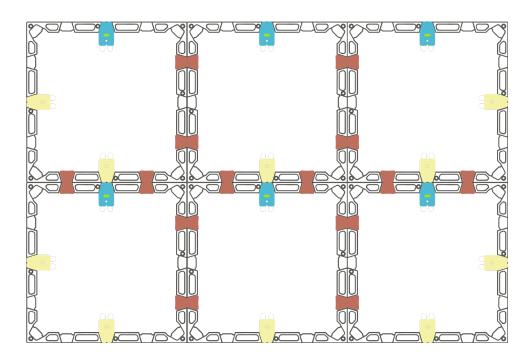

Hardware Used



Level Cleat




Cleat




Bowtie

Rule 1

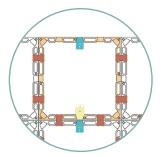


Begin building with one of the **topmost** Frames

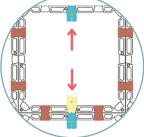

Rule 3

Each Frame needs a Level Cleat in the **top** and a regular Cleat in the **bottom**

Rule 4

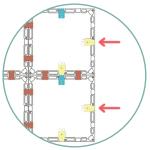

Use remaining Regular Cleats on the **outermost** edges to keep Frames flat and secure

Join Frames together with (2) Bowties on adjoining sides before placing Cleats


Rule 2



1 HOUR





If you are using adhesive strips, let the adhesive set for 1 hour before installing panels

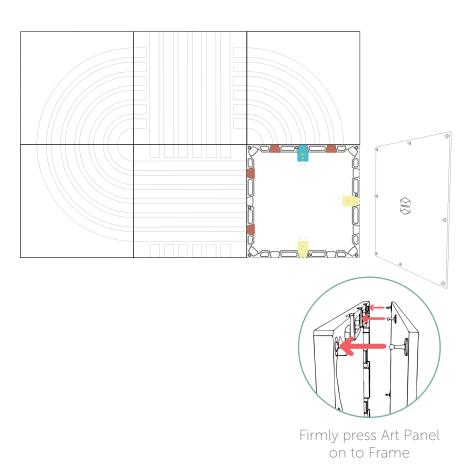


E Updating Your Layout Re-arranging the artwork for a fresh look

Rotate, swap or add new Art Panels to keep your Spacekit looking fresh

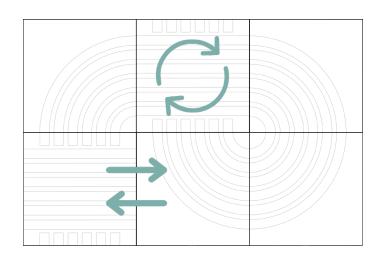

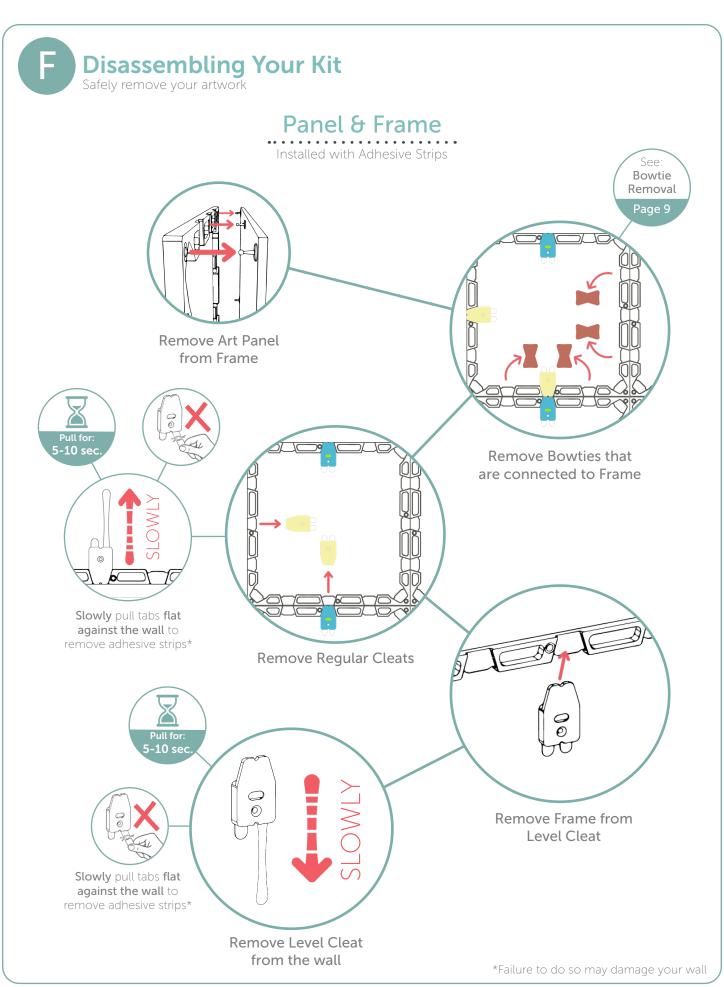

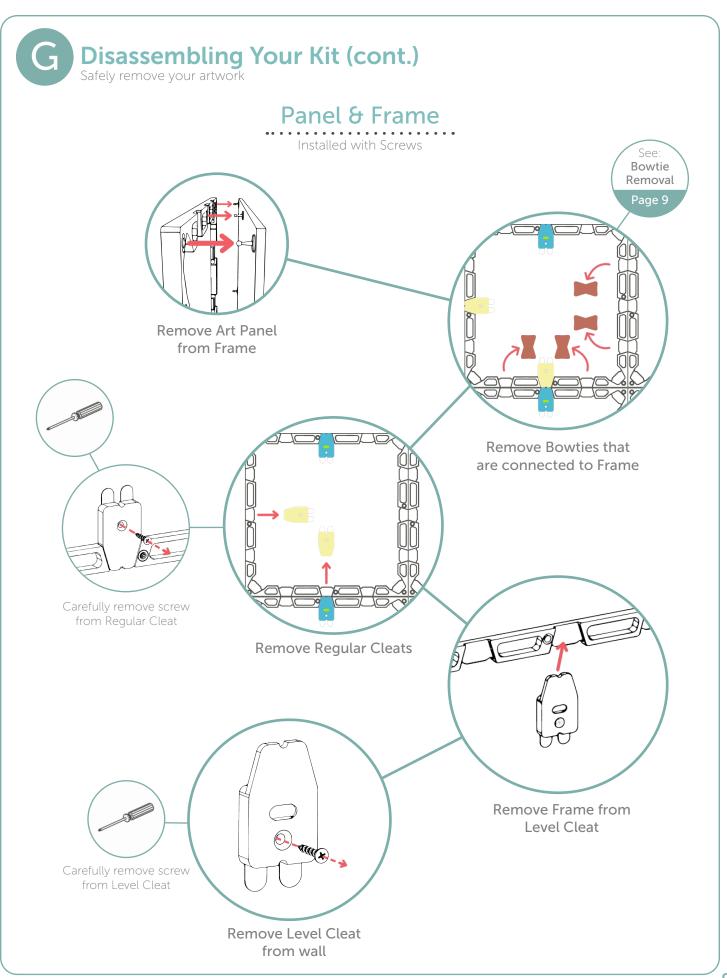

Tips & Best Practices

Adhesive Strip Surfaces -



- Painted Walls
- Painted & Varnished Wood
- Painted Cinder Block & Concrete
- Tile
- Glass
- Metal
- Laminates
- Most Smooth Plastics




- Brick
- Wallpaper
- Textured Walls
- Fabric
- Rough Surfaces


· Wall Preparation -



Gently wipe down your wall with isopropyl rubbing alcohol using a lint-free rag. Household cleaners may leave residue.


Bowtie Removal -

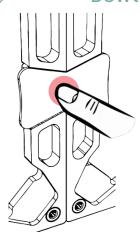




Firmly press thumb in the center of the Bowtie and use fingers to pull up on edges emulating a **peeling** motion.


Screw Installation

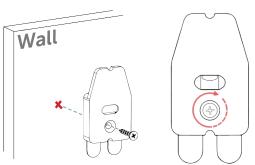


Drive screw until it holds the Cleat to the wall snugly. Over-tightening will result in a stripped hole.

Using Adhesive Strips -

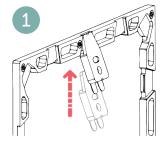

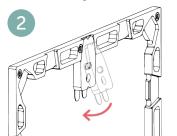

To prevent early adhesion, slide Cleats into position in the Frame at an angle, ensuring the adhesive strips do not make contact with the wall. When happy with the position of the Cleat, secure it by pressing and holding flat against the wall for 30sec.

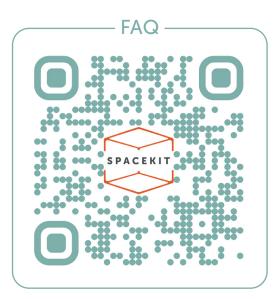

Tips & Best Practices


-Product Cleaning-




To clean your Spacekit gently use a feather duster. For a deeper clean use water and a lint-free rag.

Frame Dimensions 19.7" 19.8" Large 19.7"


- Re-Applying Adhesive Strips -

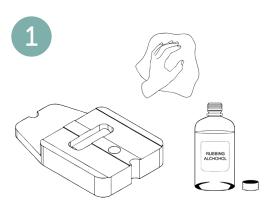


Remove old adhesive strips and wipe clean the back surface of the Cleat with rubbing alcohol.

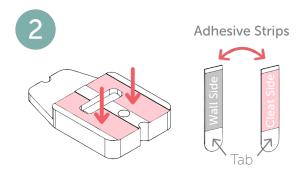

Remove the **red**, Cleat Side liners. Place each strip in a groove Cleat Side down (Wall Side up) ensuring the tab is positioned at the bottom of the Cleat.

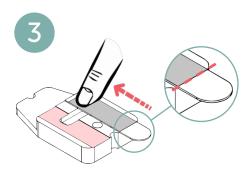


Position the adhesive strip with the edge of the Wall Side liner aligned with the bottom edge of the Cleat. Run your finger along the strip to ensure it makes full contact.

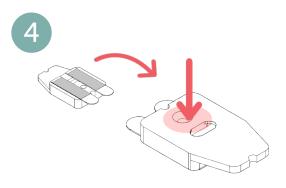


Flip the Cleat over and **press firmly** onto a flat surface to make sure the adhesive strips create a solid bond to the Cleat.

Looking For A New Configuration?


Other Layouts To Try With Your Spacekit

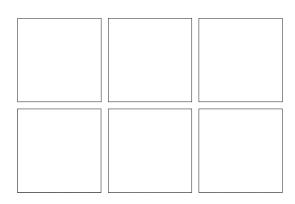

Large Square Grid Spacing

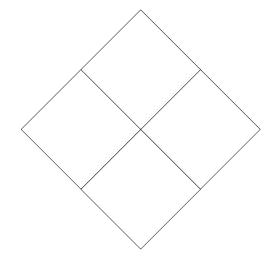

Large Diamond Grid No Spacing

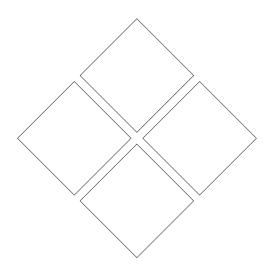

Large Diamond Grid Spacing



Scan Code
For Additional Instructions