


SPACEKIT

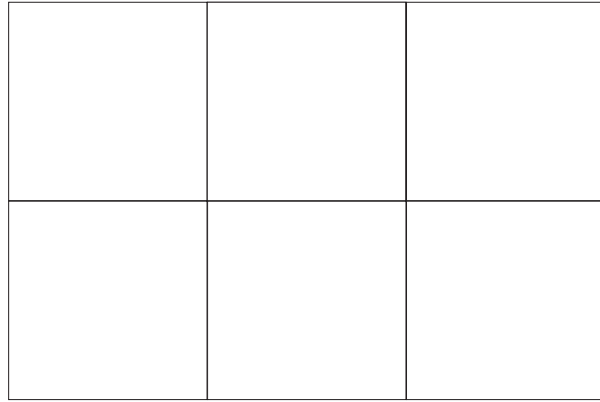

Mini Square Grid | No Spacing


Installation Instructions

.....


This is going to be a snap!

Welcome to Spacekit! Congratulations on selecting a great look for your space. Let's get started!

Panel & Frame

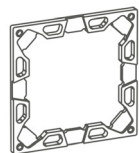


Mini Frame

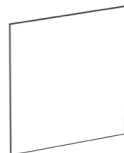


Mini Art Panel


You may need



Pencil



Tape
measure



Phillips
screwdriver

Included Hardware



Screw




Bowtie



Cleat



Level Cleat

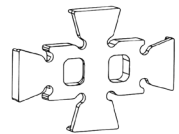

Spacer

CONTENTS



page
03

Getting Started:
Adhesive Strips

page
04

Getting Started:
Screws

page
05

Understanding
How To Build

page
06

Finishing Your Kit

page
06

Updating Your
Layout

page
07

Disassembly & Removal:
Adhesive Strips

page
08

Disassembly & Removal:
Screws

page
09

Tips & Best Practices

page
11

Additional
Configurations

Hanging your first Frame

.....



See:
Rule 1
Section



PRESS & HOLD
30 sec.



Place Level Cleat
at marked starting
location




B

Getting Started: Screws


Hanging your first Frame

Optional Method


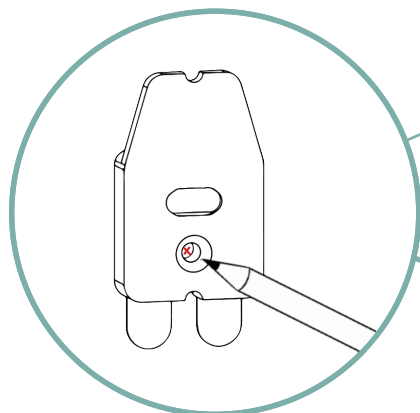


Hold Level Cleat in place and mark desired starting location on wall


See:
Rule 1
Section
C

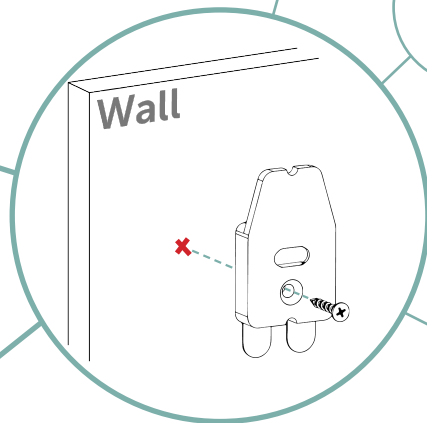


Place Level Cleat at marked starting location and hand tighten

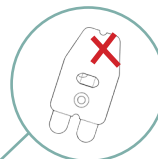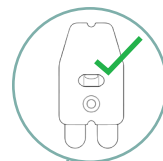


Don't over-tighten

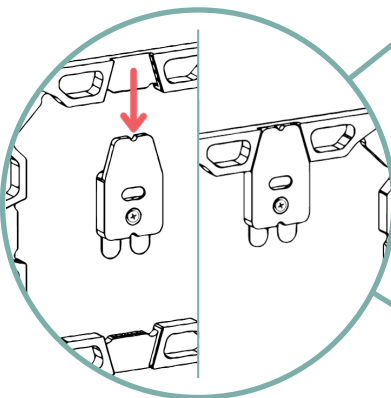

Hang Frame on Level Cleat

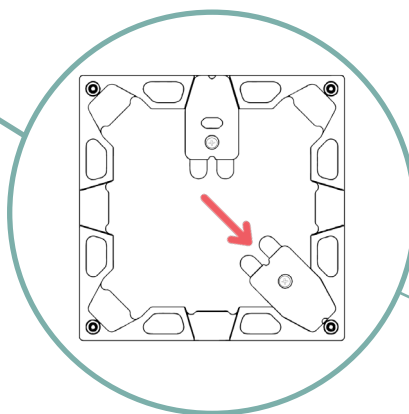

Place Regular Cleat in bottom-right of Frame

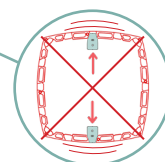


Don't bend the Frame



Understanding How To Build

Adapt the number of frames to your kit design

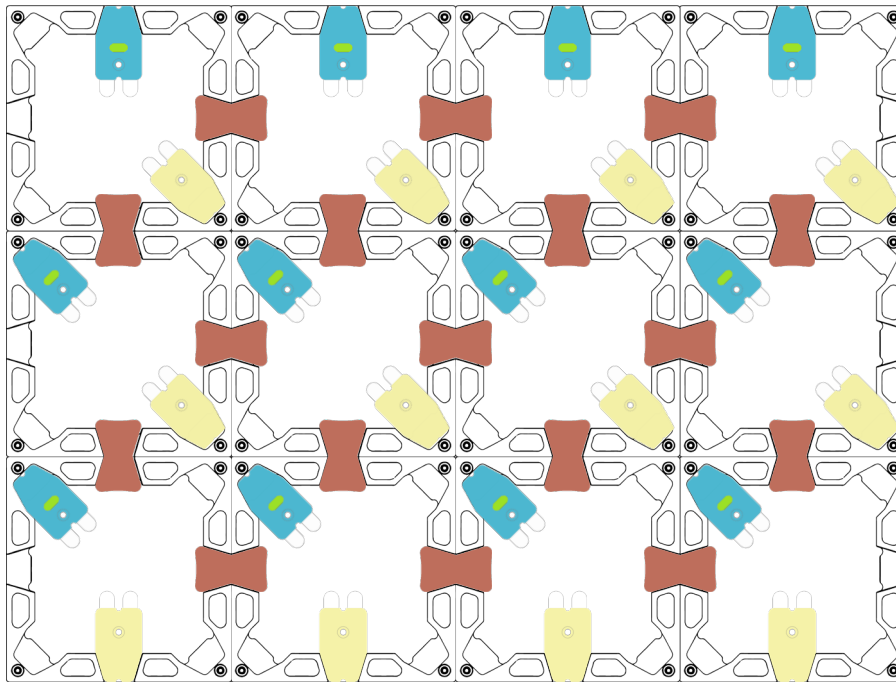

Hardware Used



Level Cleat




Cleat




Bowtie

Rule 1

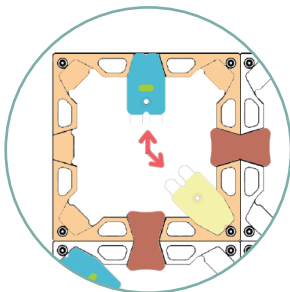


Begin building from the **top row** of your design, placing a Level Cleat in the **top-center** and a Regular Cleat in the **bottom-right** of each Frame

Rule 2

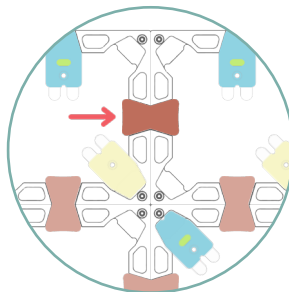


Add each new Frame with a Bowtie on adjoining sides **before** placing Cleats

Rule 3

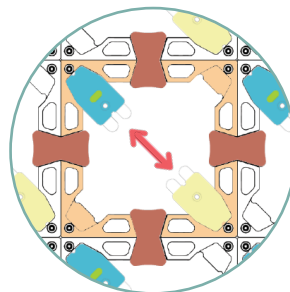

Any middle row Frames need a Level Cleat in the **top-left** and a Regular Cleat in the **bottom-right**

Rule 4

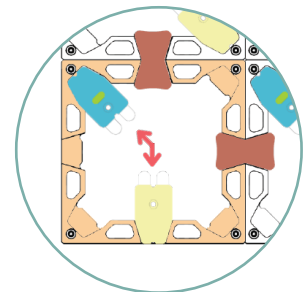

The bottom Frames need a Level Cleat in the **top-left** corner and a Regular Cleat in the **bottom-center**



D Finishing Your Kit

Installing the artwork

1 HOUR



If you are using adhesive strips, let the adhesive set for 1 hour before installing Art Panels

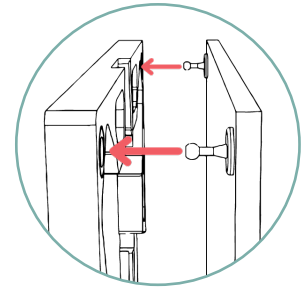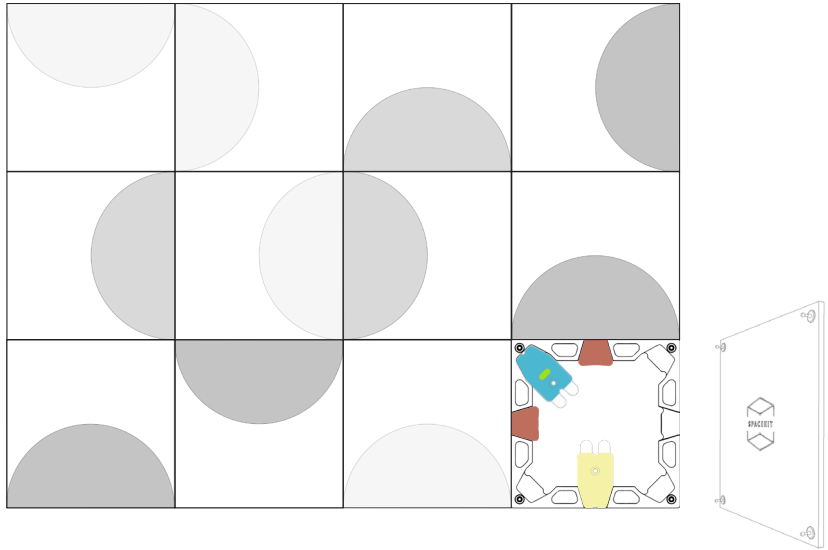


Firmly press Art Panel on to Frame

E Updating Your Layout

Re-arranging the artwork for a fresh look

Rotate, swap or add new Art Panels to keep your Spacekit looking fresh

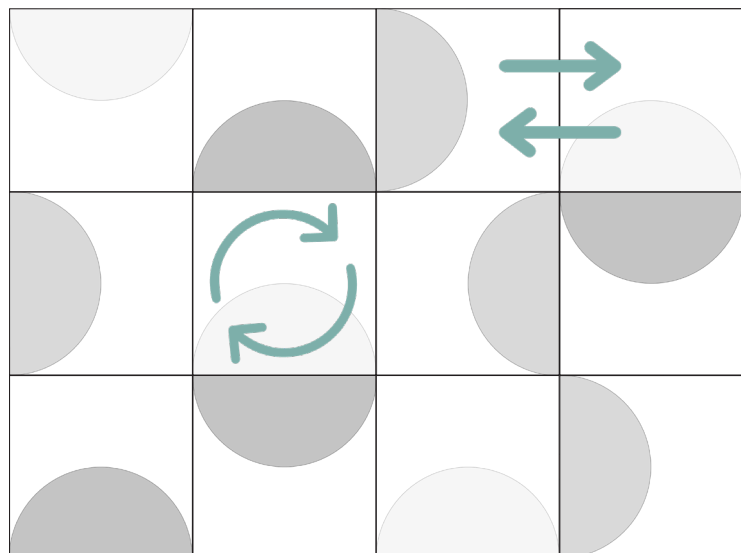




Disassembling Your Kit

Safely remove your artwork


Panel & Frame

Installed with Adhesive Strips

See:
Bowtie
Removal
Page 9

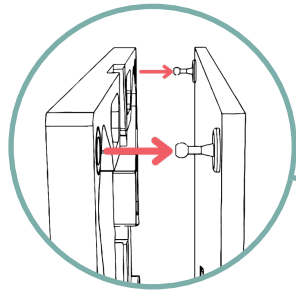


Remove Art Panel
from Frame

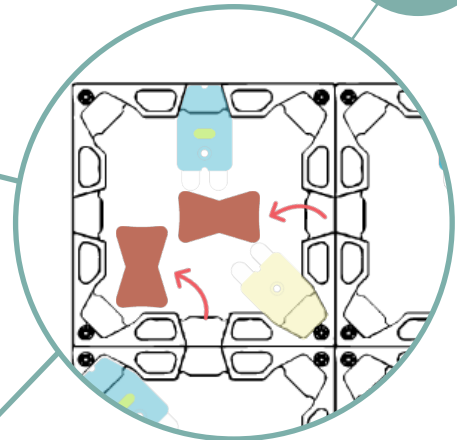


Remove Bowties that
are connected to Frame




Pull for:
5-10 sec.

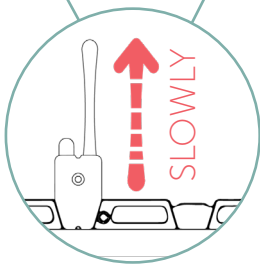

Slowly pull tabs flat
against the wall to
remove adhesive strips*

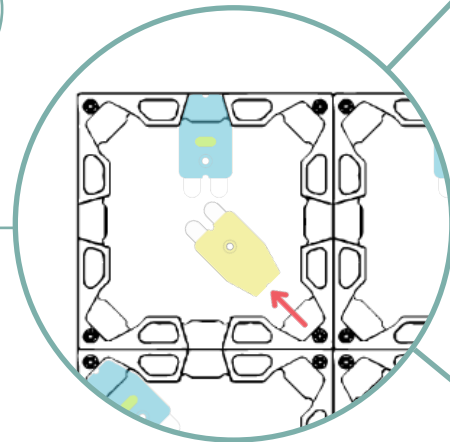

Remove Regular Cleat

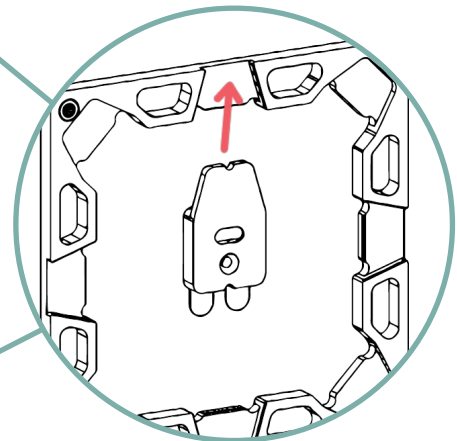


Remove Frame from
Level Cleat



Pull for:
5-10 sec.



Slowly pull tabs flat
against the wall to
remove adhesive strips*

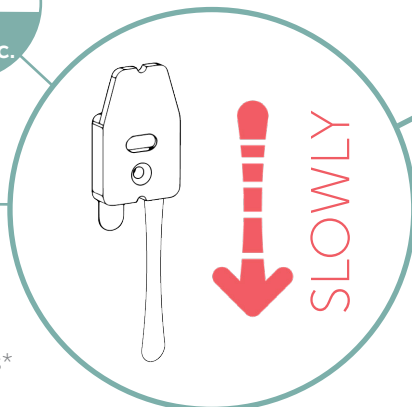

Remove Level Cleat
from the wall

*Failure to do so may damage your wall




Disassembling Your Kit (cont.)

Safely remove your artwork


Panel & Frame

Installed with Screws



See:
Bowtie
Removal
Page 9

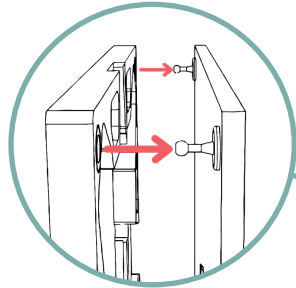


Remove Art Panel
from Frame

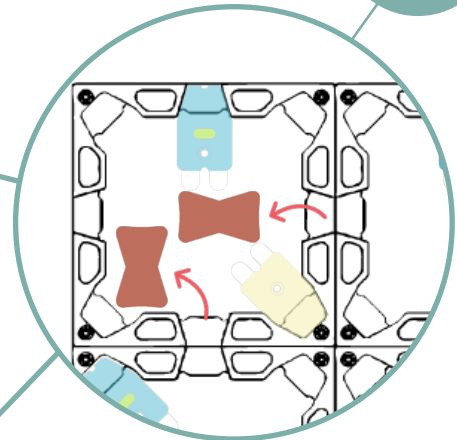


Remove Bowties that
are connected to Frame

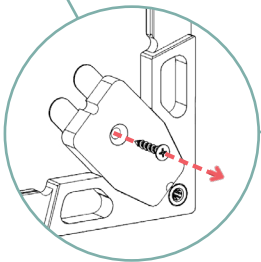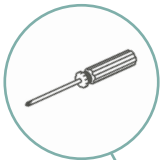



Carefully remove screw
from Regular Cleat

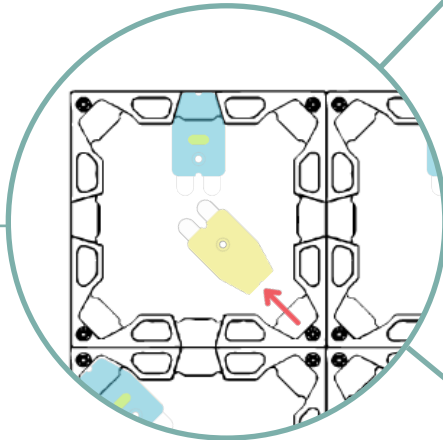

Remove Regular Cleat

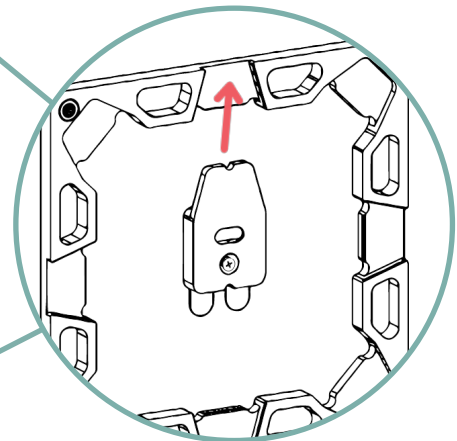

Remove Frame from
Level Cleat

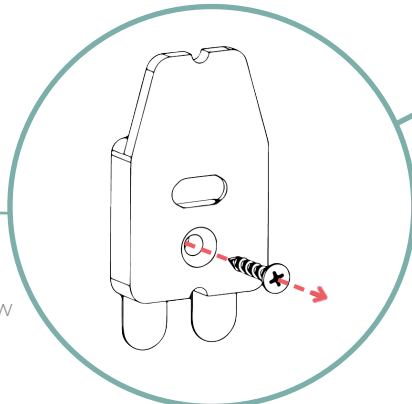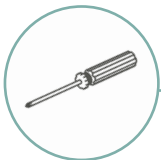

Carefully remove screw
from Level Cleat

Remove Level Cleat
from wall

Tips & Best Practices

Adhesive Strip Surfaces


✓	✗
<ul style="list-style-type: none"> • Painted Walls • Painted & Varnished Wood • Painted Cinder Block & Concrete • Tile • Glass • Metal • Laminates • Most Smooth Plastics 	<ul style="list-style-type: none"> • Brick • Wallpaper • Textured Walls • Fabric • Rough Surfaces

Wall Preparation




Gently wipe down your wall with isopropyl rubbing alcohol using a lint-free rag. Household cleaners may leave residue.

Bowtie Removal

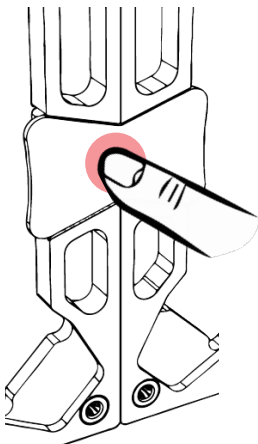


Firmly press thumb in the center of the Bowtie and use fingers to pull up on edges emulating a **peeling** motion.

Screw Installation

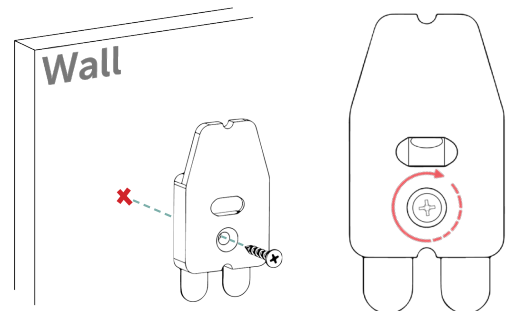


Drive screw until it holds the Cleat to the wall snugly. **Over-tightening will result in a stripped hole.**

Using Adhesive Strips

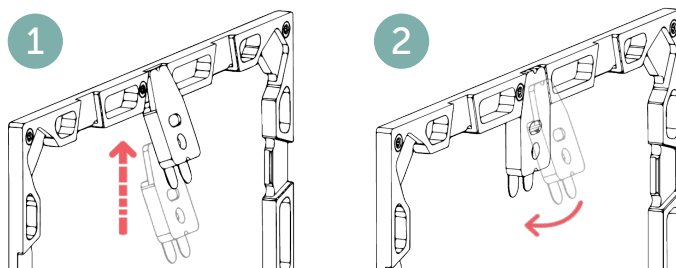


To prevent early adhesion, slide Cleats into position in the Frame **at an angle**, ensuring the adhesive strips do not make contact with the wall. When happy with the position of the Cleat, secure it by **pressing and holding flat against the wall for 30sec.**

FAQ

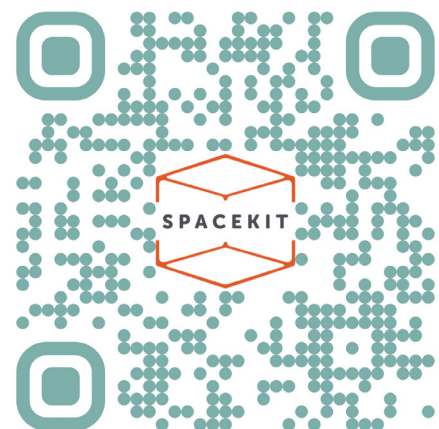


Tips & Best Practices

Product Cleaning

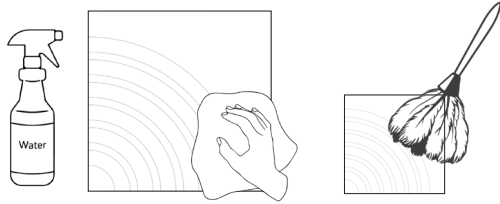


To clean your Spacekit gently use a feather duster. For a deeper clean use water and a lint-free rag.

Frame Dimensions

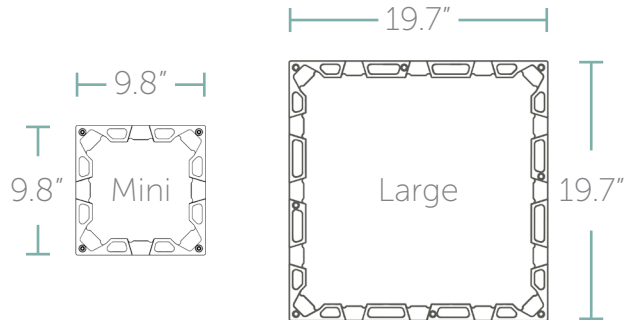


Re-Applying Adhesive Strips

1

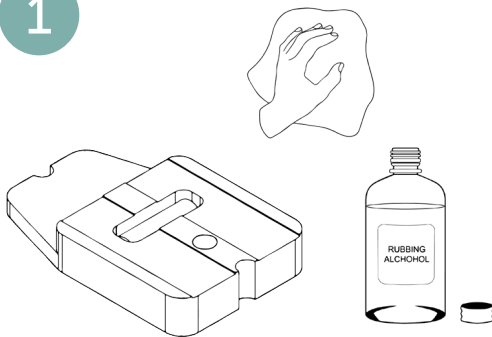


Remove old adhesive strips and wipe clean the back surface of the Cleat with rubbing alcohol.

2

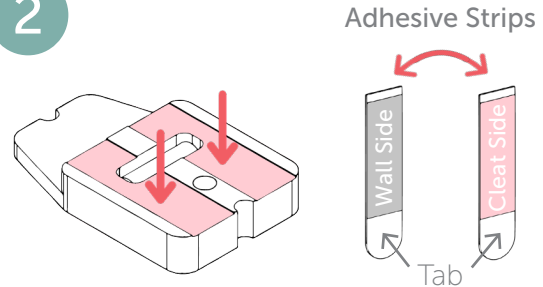


Remove the **red**, Cleat Side liners. Place each strip in a groove Cleat Side down (Wall Side up) ensuring the tab is positioned at the bottom of the Cleat.

3

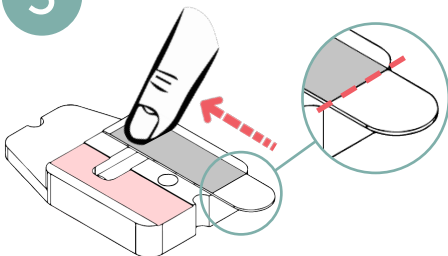

Position the adhesive strip with the edge of the Wall Side liner aligned with the bottom edge of the Cleat. Run your finger along the strip to ensure it makes full contact.


4

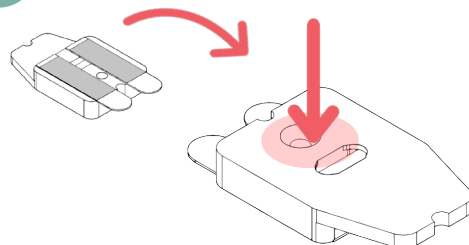


Flip the Cleat over and **press firmly** onto a flat surface to make sure the adhesive strips create a solid bond to the Cleat.

Looking For A New Configuration?


Other Layouts To Try With Your Spacekit

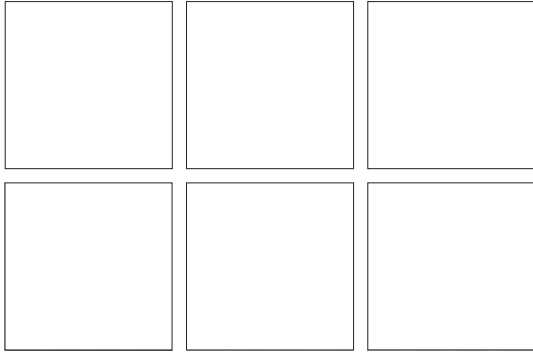


Large Square Grid
Spacing

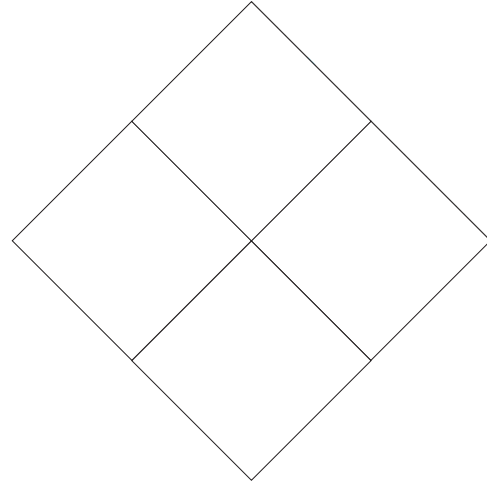

Large Diamond Grid
No Spacing

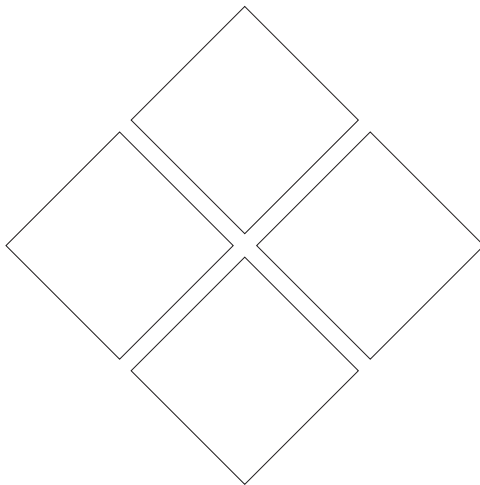

Large Diamond Grid
Spacing

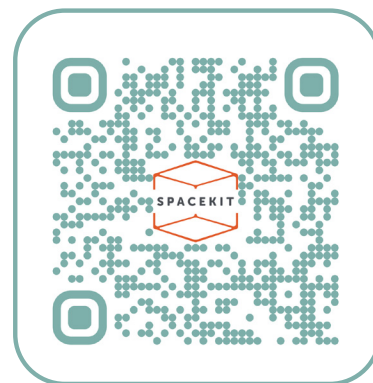

Scan Code
For Additional Instructions