

# BR Model Series - Installation Steps

6SEB-BR shown



TYVEK BUILDING WRAP




SLICE WRAP IN AN "X" IN A PROPERLY SIZED ROUGH OPENING



APPLY A LIBERAL AMOUNT OF CONSTRUCTION SEALANT. RECOMMENDED SIKA FLEX CONSTRUCTION SEALANT



INSERT INTO OPENING AND FASTEN WITH SCREWS AROUND PERIMETER

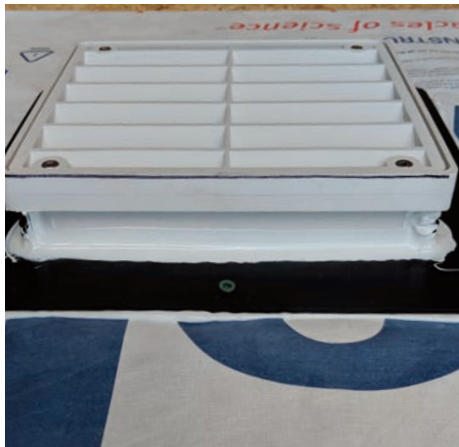

APPLY SEALANT AROUND BOX CAVITY AND MOUNTING FLANGE. SEAL TOP OF MOUNTING BRACKETS AS WELL.



APPLY SEALANT AROUND BOX CAVITY AND MOUNTING FLANGE. LEFT SIDE



INSTALL TYVEK TAPE AROUND PERIMETER OF MOUNTING FLANGE, BOTTOM FIRST THEN SIDES FIRST THEN TOP.



FINISHED, TOP RIGHT SIDE SHOWN. NO OPENINGS



FINISHED,