



OWNER'S MANUAL



**Instructions for the installation, operation
and maintenance of all Centerline™ by Traulsen Compacts:
Undercounter Refrigerators & Freezers*
Prep Tables and Mega Tops***

*Please Note: This manual is intended for use with the above referenced equipment manufactured after May 01, 2020.

4401 Blue Mound Road Fort Worth, Texas 76106 (USA)
Phone: 800.825.8220 | Service Fax: 817.740.6757 | E-mail: service@traulsen.com | Website: centerlinefoodequipment.com
Form Number: TR36231 | Part Number: 375-60363-00 | Revision Date: 06-09-20
Hours of Operation: Monday - Friday 7:30 a.m. - 4:30 p.m. (CST)

TABLE OF CONTENTS

I. THE SERIAL TAG	Page 1	V. CARE AND MAINTENANCE	Page 6
a) Serial Tag & Location	Page 1	a) Cleaning the Exterior	Page 6
b) Reading The Serial Tag	Page 1	b) Cleaning the Interior	Page 6
II. RECEIPT INSPECTION	Page 2	c) Cleaning the Condenser Coil	Page 6
III. INSTALLATION	Page 2	d) Condensate Removal System Care	Page 7
a) Location	Page 2	e) Door Re-Hinging	Page 7
b) Packaging	Page 2	f) Adjusting the Door	Page 7
c) Installing Legs or Casters	Page 2	g) Replacing the Gaskets	Page 8
d) Installing Drain Pan	Page 3	h) Preparing for Extended Shutdown	Page 8
e) Shelf Clips for Door Models	Page 3	VI. CONTROL BASICS	Page 8
f) Cord & Plug	Page 3	a) Information Menu	Page 8
g) Power Supply	Page 3	b) Adjusting Cabinet Setpoint	Page 8
h) Clearance	Page 3	c) Initiating a Defrost	Page 9
i) Cutting Board Assembly	Page 4	d) Configuration Parameters	Page 9
j) Installing Backsplash	Page 4	e) Technical Data	Page 10
IV. OPERATION	Page 5	f) Componets and Wiring Diagram	Page 15
a) Operation Display Indicators	Page 5	VII. TROUBLESHOOTING GUIDE	Page 16
b) Refrigerators	Page 5	VIII. SERVICE/WARRANTY INFORMATION	Page 17
c) Freezers	Page 5	a) Service Information	Page 17
d) Prep Table & Mega Top Refrigerator	Page 5	b) Spare Parts Information	Page 17
e) Refrigerating Product	Page 5	c) Warranty Registration	Page 17
f) Divider Bars	Page 6	d) Warranty Statement	Page 18

I. THE SERIAL TAG

I. a - SERIAL TAG & LOCATION

The serial tag is a permanently affixed label on which is recorded vital electrical and refrigeration data about your Centerline product, as well as the model and serial number. This tag is located in upper right interior compartment on all compact models.

I. b - READING THE SERIAL TAG

- **Model** = The model # of your Traulsen unit
- **(S/N) Serial Number** = The permanent ID# of your Traulsen unit
- **Refrigerant SYS1** = System 1 Refrigerant type used and refrigerant charge
- **Design Pressure** = System 1 High and Low Pressure
- **Refrigerant SYS2** = System 2 Refrigerant type used and refrigerant charge
- **Design Pressure** = System 2 High and Low Pressure
- **Volts** = Voltage
- **Hz** = Cycle
- **PH** = Phase
- **Total Current** = Maximum amp draw
- **Min Circuit Amps** = Minimum circuit ampacity
- **Lights** = Light wattage
- **Agency Labels** = Designates agency listings
- **Components** = Component Ratings



ITW Food Equipment Group, LLC
North American Refrigeration
4401 Blue Mound Rd.
Ft. Worth, TX 76106
800-825-8220

MODEL:	CLUC-27R-SD		
MODELO:			
MODELE:			
S/N:	T99999A99		
REFRIGERANT / REFRIGERANTE / RÉFRIGÉRANT			
SYS1 (REFM):	R-450A	8.00 oz	226.80 g
Hi Press. (PRESH):	330 psi	2.28 MPa	(2,28 MPa)
Lo Press. (PRESL):	150 psi	1.03 MPa	(1,03 MPa)
SYS2 (REFA):			
Hi Press. (PRESH):			
Lo Press. (PRESL):			
Input Power (ELIN) - FOR INDOOR USE ONLY			
115 V	60 Hz	~	3.3 A (3,30 A)
CONFIRMED IN THE U.S.A. FOR THE CANADIAN MARKET, C22.2 NO. 138		CONFIRMED IN THE U.S.A. FOR THE CANADIAN MARKET, C22.2 NO. 138	
Device/Part Number:		Device/Part Notes:	
CLUC-27R-SD-L			
COMPONENTS / COMPOSANTS / COMPONENTES			
COMP AMPS:		LIGHT WATTS:	
COND FAN AMPS:		CTRL AMPS:	
DEF HTR AMPS:		B/TMCE HTR AMPS:	
DOOR HTR AMPS:		MIN CIRCUIT IN AMPS:	
EVAP FAN AMPS:		MAX OVR. CURRENT PROTECTION AMPS:	

370-60297-00 REV.B 11/21/14

II. RECEIPT INSPECTION

II. a - RECEIPT INSPECTION

All Centerline products are factory tested for performance and are free from defects when shipped. The utmost care has been taken in crating this product to protect against damage in transit.

You should carefully inspect your Centerline unit for damage upon delivery. If damage is detected, you should save all the crating materials and make note on the carrier's Bill of Lading describing this. A freight claim should be filed immediately. If damage is subsequently noted during or immediately after installation, contact the respective carrier and file a freight claim. Under no condition may a damaged unit be returned to Traulsen without first obtaining written permission (return authorization). You may contact Traulsen customer care at (800) 333-7447 and select option 2 to request a return.

III. INSTALLATION

III. a - LOCATION

Select a proper location for your Centerline unit, away from extreme heat or cold. Allow enough clearance between the unit and the side wall in order to make use of the door stay open feature at 120° (self-closing feature operates up to 90°). The door(s) must be able to open a minimum of 90° in order to make use of the maximum clear door width available.

NOTE: Do not install the cabinet without casters.

III. b - PACKAGING

All Centerline units are shipped from the factory bolted to a sturdy wooden pallet and packaged in a durable cardboard container.

To remove the wooden pallet, first if at all possible, we suggest that the cabinet remain bolted to the pallet during all transportation to the point of final installation. The bolts can then be removed with a 5/8" socket wrench by tipping or otherwise raising the unit to allow access to them.

NOTE: Traulsen does not recommend laying the unit down on its front or side or back. However, if you must only lay unit on the front of side, not the back and please be certain to allow the unit to remain in an upright position afterwards for 24 hours before plugging it in so that the compressor oils and refrigerant may settle.

III. INSTALLATION (continued)

III. c - INSTALLING LEGS OR CASTERS

A set of 4" high casters are supplied standard for all compact undercounter and prep table units. These are shipped from the factory inside a cardboard box which is secured inside the cabinet.

⚠ WARNING THE CABINET MUST BE BLOCKED AND STABLE BEFORE INSTALLING CASTERS.

The "Stem" casters are installed by threading them firmly into the cabinet bottom at each corner (see figure 1). For levelling, turn the casters counterclockwise to raise it, clockwise to lower it. Level the unit from front to back as well as side to side in this manner. The caster bolts are tightened using a 1/2" socket wrench. Casters with locks should be installed in the front for easy access to locking mechanism.

Legs & 6" casters are available in lieu of 4" casters as an optional accessory kit for the same models. These are shipped inside a separate cardboard box containing four (4) casters/legs.

To install the legs or casters, first raise and block the cabinet a minimum of 7" from the floor. For installing legs, thread the legs into the threaded holes on the bottom of the cabinet (see figure 2). Be certain that all legs are tightly secured. When the unit is set in its final position, it is important for proper operation that the unit be level. The legs are adjustable for this purpose; turn the bottom of the leg counterclockwise to raise it, clockwise to lower it. Level the unit from front to back as well as side to side in this manner.

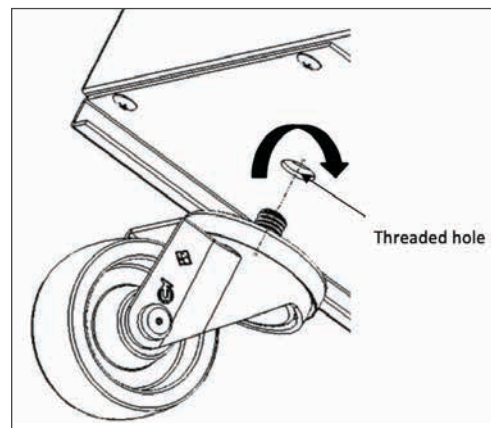


Fig. 1

III. INSTALLATION (continued)

III. d - INSTALLING DRAIN PAN

Centerline compact models are shipped with the drain pan wrapped up and stored inside the unit.

Remove the drain pan and slide it on the rails underneath the cabinet. Route the drain tubing drain into the pan to ensure water drains into the pan (see figure 2).

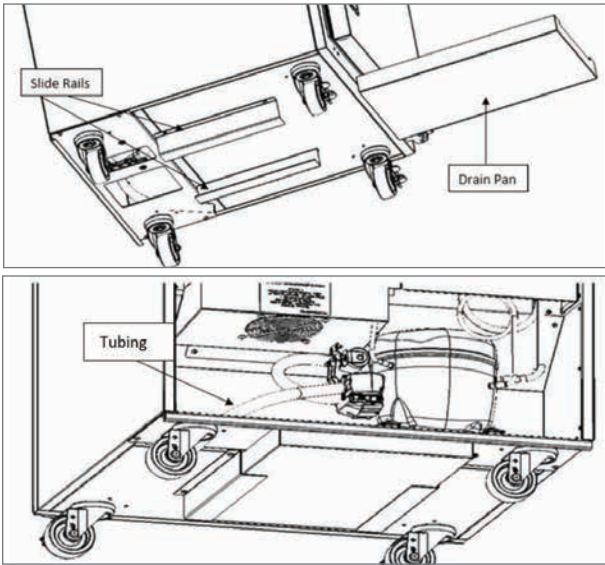


Fig. 2

III. e - SHELF CLIPS FOR DOOR MODELS

Shelves and shelf clips are shipped with the unit. Shelves are mounted on pilasters using clips to adjust the shelf height. For each shelf, insert four (4) shelf clips into the pilaster slots at the same height. The shelf clips have a small projection on top which holds the shelf in position and prevents it from slipping forward. To remove the clips, pinch down on the mounting side and pull them outwards. Make sure the clips are securely installed. Lastly, set the shelf into its new position.

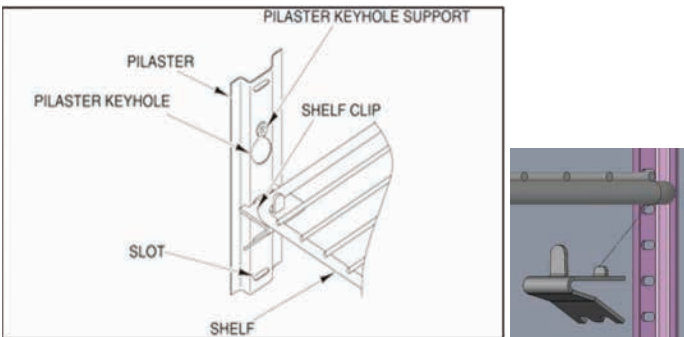


Fig. 3

III. f - CORD & PLUG

All Centerline compact models are supplied with a cord & plug attached. It is shipped coiled and secured by a nylon strip to the back of the cabinet near condensing unit area. For your safety and protection, all units supplied with a cord and plug include a special three-prong grounding plug on the service cord. Select only a dedicated electrical outlet with grounding plug for power source.

NOTE: DO NOT UNDER ANY CIRCUMSTANCES CUT OR REMOVE THE ROUND GROUNDING PRONG FROM THE PLUG OR USE AN EXTENSION CORD.

III. g - POWER SUPPLY

The supply voltage should be checked prior to connection to be certain that proper voltage for the cabinet wiring is available (refer to the serial tag to determine correct unit voltage). Make connections in accordance with local electrical codes. Use qualified electricians.

Use of a separate, dedicated circuit is required. Size wiring to handle indicated load and provide necessary over current protector in circuit (see amperage requirements on the unit's serial tag).

III. h - CLEARANCE

In order to assure optimum performance, the condensing unit of your Centerline unit **MUST** have an adequate supply of air for cooling purposes. Therefore, the operating location must have a minimum of 1" clearance on top of the unit for proper air flow. There are no clearance requirements for the sides or rear.

III. INSTALLATION (continued)

III. i - CUTTING BOARD ASSEMBLY

On prep tables and mega top tables, the cutting board may require assembly at the site.

Install cutting board brackets on each side with two screws. With brackets installed, slide the cutting board in at an angle under the lip in the back and then let it rest down with the pins running through the holes on the board (see figure 4). The cutting board is field reversible, reverse process to reverse cutting board.

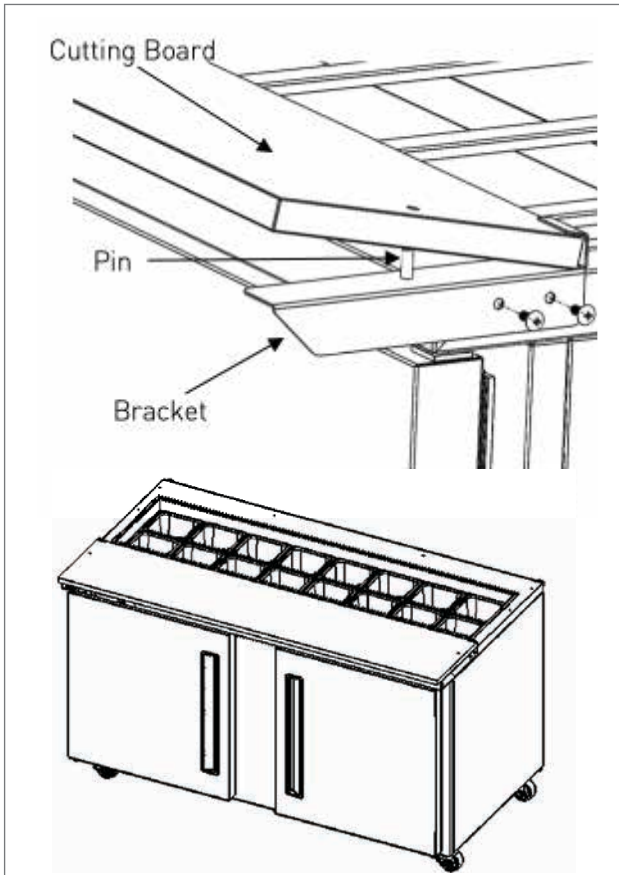


Fig. 4

III. j - INSTALLING BACKSPLASH

All 27", 36", 48", 60", & 72" wide compact undercounter models can be supplied with an optional backsplash that must be installed on-site. To do so, please follow the directions below:

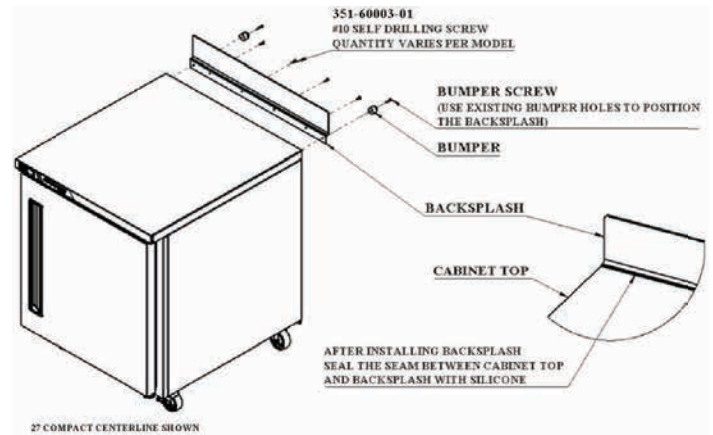


Fig. 5

1. Install backsplash as shown in figure 5. The backsplash is attached with self-drilling Philips head screws. The outer most holes are used to install bumpers.
2. Align the outer holes used for the bumpers to attach the backsplash. Attach the backsplash with the just the outer holes and bumpers temporarily to hold in place.
3. Assure the front lip of the backsplash is contacting the top of the unit. Use the self-threading sheet metal screws to attach the inner portion through the hole locations on the backsplash.
4. Use silicone or similar product to seal any gaps between the backsplash and the exterior top.

IV. OPERATION

Both refrigerators and freezers do not require manual defrosting. However, manual defrost option is available on the control, if required.

IV. a - OPERATION DISPLAY INDICATORS

During normal operation, the display shows either the temperature measured or one of the following indications:

dEF	Defrost in progress
oFF	Controller in stand-by
cL	Condenser clean warning
do	Door open alarm
E1	Probe T1 failure
E2	Probe T2 failure
E3	Probe T3 failure

IV. b - REFRIGERATORS

During normal operation, a refrigerator continuously circulates above-freezing cabinet air through the evaporator coil. An Off-Cycle defrost occurs every 8 hours for a maximum length of 50 minutes to melt any frost which may accumulate on the coil during the compressor “ON” cycle. With standard holding refrigerators, high relative humidity is also maintained to prevent dehydration of stored product.

IV. c - FREEZERS

During normal operation, a freezer continuously circulates below-freezing cabinet air through the evaporator coil. The coil requires a periodic defrosting for proper operation. This is accomplished by an automatic, compressor runtime activated, temperature/time terminated, defrost program. Depending on the door opening frequency and the ambient condition, the defrost may occur 3 to 8 times within each 24-hour period.

At the start of a freezer defrost cycle, both the compressor and evaporator fans are off. The microprocessor control will read “dEF” (see figure 6).



Fig. 6

V. OPERATION

IV. c - FREEZERS (cont'd)

The electric heaters (attached to the evaporator coil and drip pan) are energized. When the temperature sensor affixed to the coil senses 50°F, the coil and drip pan are fully defrosted. Both heaters and compressor are off for 5 minutes to let the defrost water drip out completely. After drip time, compressor will resume operation. The evaporator coil fans are delayed from starting at the termination of a defrost cycle. Fan operation is automatically resumed after a short time or temp delay (whichever comes first). After completion, the total refrigeration system operation is then resumed. During defrost operation, heat is confined to the coil enclosure to prevent any significant rise in temperature within the food zone. The fan delay control function upon termination of a defrost cycle is two-fold. First, to prevent blowing warm air into the food storage area. Second, to prevent any condensation on the defrost coil from being blown into the food storage area.

The microprocessor control is set from the factory to terminate defrost at 25 minutes for freezers in the event of a sensor failure. This setting should never be tampered with, without first consulting the factory.

IV. d - PREP TABLE & MEGA TOP REFRIGERATOR

The prep table and mega top refrigerator will function as a refrigerator. Due to the open top feature, it runs slightly lower evaporator temperature and builds more frost on coil than the regular refrigerator. The prep table and mega top therefore utilize electric heater for more effective defrost. The defrost procedure is the same as in freezer described in section IV.c, except the defrost will be terminated at 45°F.

IV. e - REFRIGERATING PRODUCT

Centerline compact models will satisfactorily refrigerate an assorted load of food items. Allow space between articles to permit free air circulation. Do not overload at any one time with warm food products and expect immediate results. A certain amount of time is required to remove heat from items before operating temperatures can be attained. The system is designed for storage of refrigerated or frozen product.

Opening the door or drawer will increase the temperature in the cabinet and will require a certain amount of time to recover. Also, after peak service periods or after warm product is loaded, the refrigerator will require a certain amount of time for the temperature to return to the normal operating range.

V. CARE AND MAINTENANCE (continued)

IV. f - DIVIDER BARS

Top Rail: Centerline compacts are provided with standard width pan divider bars. Pans are not provided with the unit.

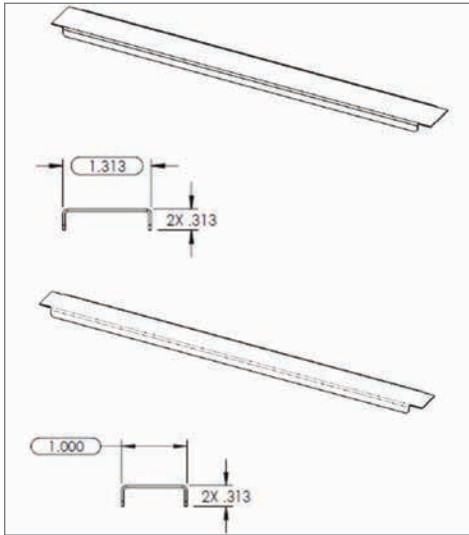


Fig. 7

Drawers: Drawer models are provided with metal divider bars standard. All 27" wide models are supplied with standard width bars. 48" and 72" models are supplied with 2 narrow and 2 wide bars.

V. CARE & MAINTENANCE

⚠ WARNING DISCONNECT ELECTRICAL POWER SUPPLY BEFORE CLEANING ANY PARTS OF THE UNIT.

V. a - CLEANING THE EXTERIOR

Exterior stainless steel should be cleaned with warm water, mild soap and a soft cloth. Apply with a dampened cloth and wipe in the direction of the metal grain.

Avoid the use of strong detergents and gritty, abrasive cleaners as they may tend to mar and scratch the surface. Do NOT use cleaners containing chlorine, this may promote corrosion of the stainless steel.


V. b - CLEANING THE INTERIOR

For cleaning the interior, use baking soda with warm water, and a soft cloth. Apply with a dampened cloth and wipe in the direction of the metal grain. Use on breaker strips as well as door and drawer gaskets.

All door models interior fittings are removable without tools to facilitate cleaning. Depending on the level of cleaning, drawer model interior fittings may require a tool to facilitate cleaning. The drawer frame may be removed without tools.

V. b - CLEANING THE INTERIOR (cont'd)

To remove the drawers, the lock tab must be unlocked by sliding the lock tab forward and then up, to loosen the slides (see figure 8). Then the drawer can be pulled out easily from the slides.

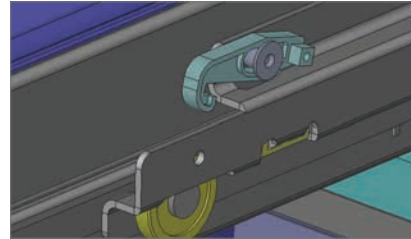

Drawer lock tab shown in unlocked position.

Fig. 8

To remove the middle slide between the drawer and cabinet for deeper cleaning, remove the middle slide by lifting up on the back tab and sliding it out of the track.

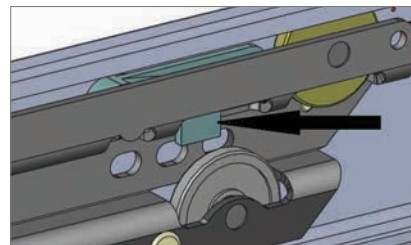


Fig. 9

Caution: The outer slides attached the side of the cabinet should not be removed because there are washers set in the assemble to hold the proper spacing between the slides. If removed the drawer slides may not function properly.

V. c - CLEANING THE CONDENSER COIL

Check the condenser coil periodically. The operating environment will affect the required frequency of cleaning. Air must be able to freely circulate through the condenser. This surface must be kept free of dirt and grease for proper system operation. The condenser coil is at the back of the cabinet. Carefully clean dirt and lint from the condenser coil using a vacuum cleaner or soft brush; do not use a wire brush.

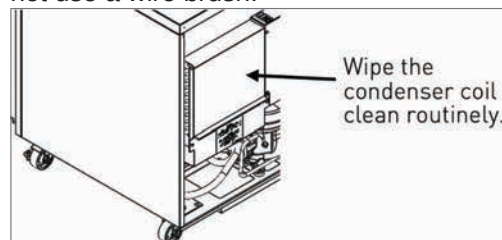


Fig.10

V. CARE AND MAINTENANCE (continued)

V. d - CONDENSATE REMOVAL SYSTEM CARE

Condensate removal is provided by evaporation at the pan at the bottom of the equipment cabinet and does not need a drain. The evaporator coil, condensate loop and condensate pan, when needed, can all be flushed with fresh water by a qualified service technician. This should be part of any routine maintenance program and can prolong the life of the equipment. Clean the condensate removal pan by wiping it out with a clean damp cloth. Replace the pan back to its location

V. e - DOOR RE-HINGING

The door(s) on all compact models can be easily re-hinged in the field. Existing hinge cartridge and top hinge bracket can be reused but an opposite side bottom hinge bracket will be needed. This bracket can be obtained from the factory by contacting our parts department (see section VIII.b) To begin, open the door to its stay-open feature position. Support the non-hinged end of the door so that minimum movement occurs when the bolts from the lower hinge brackets are removed. Remove the lower hinge bracket and then the door from the top hinge bracket. The hinge bracket pin and plastic bushing will remain in the top hinge bracket.

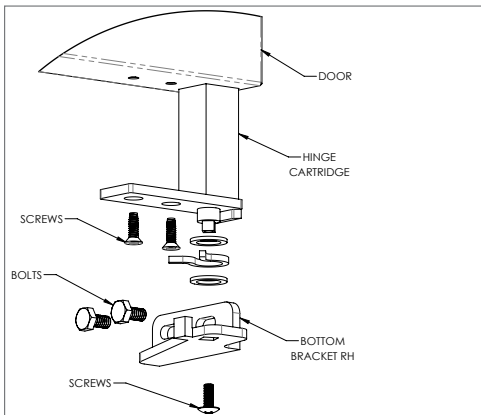


Fig. 11

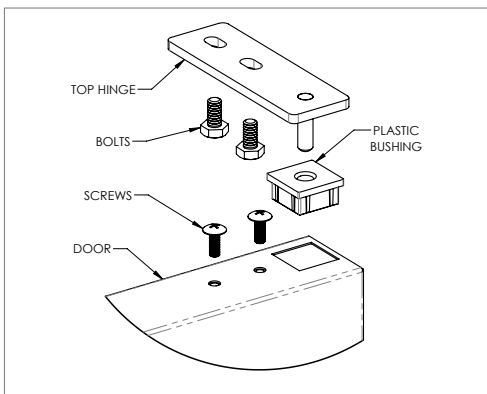


Fig. 12

V. e - DOOR RE-HINGING (cont'd)

Carefully lay the door down on a padded flat surface. The door must be rotated 180° to mount on the other side of cabinet. Remove top bushing and bottom hinge cartridge and install on opposite ends. Using the newly obtained bottom hinge bracket, follow the steps in reverse order to re-hinge the door.

NOTE: The lower hinge plate is under spring tension. Grasp the lower hinge plate while keeping a firm grip on the plate, carefully slide it out the bottom of the door just far enough to allow the plate to rotate a full 360°. Unwind the tension of the spring by carefully allowing the hinge plate to rotate a full 360 degrees several times.

V. f - ADJUSTING THE DOOR

Occasionally the door(s) may require alignment adjustment. To do so, first open the door and loosen the hinge plate screws enough to move the hinges if desired, but the door

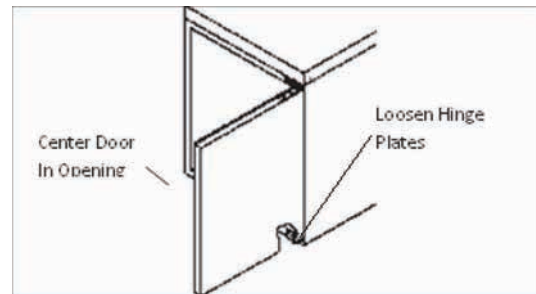


Fig. 13

is held in place. Center the door in the opening. Next level the top hinge plate and tighten the screws. Finally, level the lower hinge plate and tighten the screws.

V. CARE AND MAINTENANCE (continued)

V. g - REPLACING THE GASKETS

To replace the gasket, grasp it firmly by one corner and pull it out. Before attempting to install a new gasket, both the unit and gasket must be at room temperature. Insert the four corners first by using a rubber mallet (or hammer with a block of wood). After the corners are properly inserted, work your way towards the center from both ends by gently hitting with a mallet until the gasket is completely seated in place (see figure 14 for proper gasket placement).

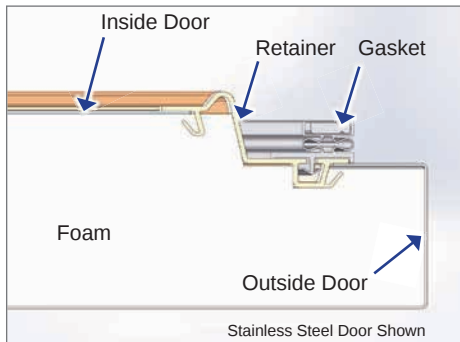


Fig. 14

V. h - PREPARING FOR EXTENDED SHUTDOWN

If the refrigerator is not to be used for an extended period of time, disconnect the electrical power supply and open the doors. As soon as the cabinet has warmed up to room temperature, wipe out the interior. Leave the doors open and check again to make sure that no moisture has collected on any parts. To restart refrigerator, follow instructions under PRESTART CHECKS and OPERATION.


VI. CONTROL BASICS

Your new Centerline Refrigerator or Freezer is equipped with a digital control, which precisely regulates operation. It is supplied from the factory completely ready for use.



VI. a - INFORMATION MENU

The information available in this menu is:

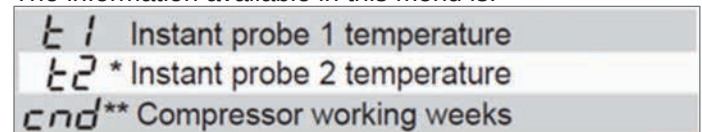

* displayed only if enabled (see Configuration Parameters)

** displayed only if ACC > 0

Access to menu and information displayed:

- Press and immediately release button **i**.
- With button **▼** or **▲** select the data to be displayed.
- Press button **i** to display value.
- To exit from the menu, press button **X** or wait for 10 seconds.

Initiate Stand-By:

Keeping the button **⏻** pressed for 3 seconds allows the controller to be put on a standby or output control to be resumed (with **SB**=YES only).

Locking the Keypad:

The keypad lock avoids undesired, potentially dangerous operations, which might be attempted when the controller is operating in a public place. In the INFO menu, set parameter **LOC** = YES to inhibit all functions of the buttons. To resume normal operation of keypad, adjust setting so that **LOC** = NO.

VI. b - ADJUSTING CABINET SETPOINT

Setpoint display and modification:

- Press button **i** for at least a half second to display the setpoint value.
- While keeping the **i** button pressed, use button **▼** or **▲** to set the desired value (adjustment is within the minimum **SPL** and the maximum **SPH** limit).
- When button **i** is released, the new value is stored.

VI. CONTROL BASICS (continued)

VI. c - INITIATING A DEFROST

Automatic defrost:

Defrost starts automatically as soon as the time set with parameter **DFT** has elapsed.

- Timed defrost: With **DFM** = TIM defrosts take place at regular intervals when the timer reaches the value of **DFT**. For example, with **DFM** = TIM and **DFT** = 36, a defrost will take place every 6 hours.
- Optimized defrost: With **DFM** = FRO the timer is only increased when the conditions occur for frost to form on the evaporator, until the time set with parameter **DFT** is matched. If the evaporator works at 0°F, defrost frequency depends on the thermal load and climatic conditions. With setpoints much lower than 0°F, defrost frequency mainly depends on the refrigerator operating time.
- Defrost time count backup: At the power-up, if **DFB** = YES, the defrost timer resumes the time count from where it was left off before the power interruption. Vice versa, with **DFB** = NO, the time count re-starts from 0. In stand-by, the accumulated time count is frozen.

Manual or remote defrost start:

It's possible to manually start a defrost, by pressing button  for 2 seconds.

Defrost type. Once defrost has started, Compressor and Defrost outputs are controlled according to parameter **DTY**. If **FID** = YES, the evaporator fans are active during defrost.

Defrost termination. The actual defrost duration is influenced by a series of parameters.

- Time termination: **T2** = NO and **T3** different from 2EU: the evaporator temperature is not monitored and defrost will last as long as time **DTO**.
- Temperature monitoring of one evaporator: **T2** = YES and **T3** different from 2EU. In this case, if the sensor **T2** measures the temperature **DLI** before the time **DTO** elapses, defrost will be terminated in advance.

VI. c - INITIATING A DEFROST (cont'd)

Resuming thermostatic cycle:

When defrost is over, if **DRN** is greater than 0, all outputs will remain off for **DRN** minutes, in order for the ice to melt completely and the resulting water to drain. Moreover, if probe **T2** is active (**T2** = YES), the fans will re-start when the evaporator gets to a temperature lower than **FDD**; Vice versa, if probe **T2** is not active (**T2** = NO) or after defrost has come to an end, such condition does not occur by end of the time **FTO**, after **FTO** minutes have elapsed the fans will be switched on anyway.

Caution: if **DFM** = NON or **C-H** = HEA all defrost functions are inhibited; if **DFT** = 0, automatic defrost functions are excluded.

VI. d - CONFIGURATION PARAMETERS

Parameter Configuration:

- To get access to the parameter configuration menu, press button  and  for 5 seconds.
- With button  or  select the parameter to be modified.
- Press button  to display the value.
- By keeping button  pressed, use button  or  to set the desired value.
- When button  is released, the newly programmed value is stored and the following parameter is displayed.
- To exit from the setup, press button  or wait for 30 seconds.

VI. CONTROL BASICS (continued)

VI. e - TECHNICAL DATA

Power supply

TRL-002....W 100-240Vac $\pm 10\%$, 50/60Hz, 3W

Relay output max loads (240Vac)

	TRL-002...S/T...-	TRL-002..Q/R...-
Compressor	16A resistive 12 FLA 48 RLA	12A resistive 12 FLA 48 RLA
Evap. Fan	16A resistive 4 FLA 12 RLA	8A resistive 4 FLA 12 RLA
Defrost	16A resistive 4 FLA 12 RLA	16A resistive 4 FLA 12 RLA
Auxiliary loads 1	7A resistive	7A resistive
Auxiliary loads 2	7A resistive	7A resistive

Input

NTC 10K Ω @25°C LAE Part No. SN4...

Measurement Range

<0.5 within the measurement range

Operating Conditions

-10... +50°C; 15%...80% r.H.

CE (Approvals and Reference Norms)

EN60730-1; EN60730-2-9; EN55022 (Class B); EN50082-1

VI. CONTROL BASICS (continued)

PAR	RANGE	DESCRIPTION
SPL	-58...SPH	Minimum limit for SP setting.
SPH	SPL...180°	Maximum limit for SP setting.
SP	SPL... SPH	Setpoint (value to be maintained in the room).
C-H	REF; HEA	Refrigerating (REF) or Heating (HEA) control mode.
HY0	1...10°	Thermostat OFF -> ON differential.
HY1	0...10°	Thermostat ON -> OFF differential.
CRT	0...30min	Compressor rest time. The output is switched on again after CRT minutes have elapsed since the previous switchover. We recommend to set CRT=03 with HY0<2.0°.
CT1	0...30min	Compressor/Heater output run when probe T1 is faulty. With CT1=0 the output will always remain OFF.
CT2	0...30min	Compressor/Heater output stop when probe T1 is faulty. With CT2=0 and CT1>0 the output will always be ON. Example: CT1=4, CT2= 6: In case of probe T1 failure, the compressor will cycle 4 minutes ON and 6 minutes OFF.
DFM	NON; TIM; FRO CRN	Defrost start mode NON : defrost function is disabled (the following parameter will be FCM). TIM : regular time defrost. FRO : the defrost time count is only increased when the conditions occur for frost to form on the evaporator (optimized time increase). CRN : defrost is based off of compressor run time (time is based off of DAT).
DFT	0...250	Time interval among defrosts in x10 minutes. When this time has elapsed since the last defrost, a new defrost cycle is started. Each number is multiplied by 10 minutes. 0-250 indicates 0-2500 minutes.
DAT	0...100 hours	Frost accumulation timeout.
DFB	NO/YES	Defrost timer backup. With DFB=YES, after a power interruption, the timer resumes the count from where it was left off with ±30 min. approximation. With DFB=NO, after a power interruption, the defrost timer will re-start to count from zero.
DLI	-58...180°	Defrost end temperature.
DMD	0...30min	Minimum defrost duration.
DTO	1...120min	Maximum defrost duration.
DTY	OFF; ELE; GAS	Defrost type OFF: off cycle defrost (Compressor and Heater OFF). ELE: electric defrost (Compressor OFF and Heater ON). GAS: hot gas defrost (Compressor and Heater ON).
DSO	OFF; LO; HI	Defrost start optimization OFF : no optimization. LO : defrost waits until the compressor cut-out. HI : defrost waits until the compressor cut-in.
SOD	0...30 min	Start optimization delay.
DPD	0...240sec	Evaporator pump down. At the beginning of defrost, defrost outputs (determined by DTY) are OFF for DPD seconds.
DRN	0...30min	Pause after defrost (evaporator drain down time).

VI. CONTROL BASICS (continued)

PAR	RANGE	DESCRIPTION
DDM	RT; LT; SP; DEF	Defrost display mode. During defrost the display will show: RT : the real temperature; LT : the last temperature before defrost; SP : the current setpoint value; DEF : "dEF".
DDY	0...60min	Display delay. The display shows the information selected with parameter DDM during defrost and for DDY minutes after defrost termination.
FID	NO/YES	Fans active during defrost.
FDD	-58...180°	Evaporator fan re-start temperature after defrost.
FTO	0...120min	Maximum evaporator fan stop after defrost.
FCM	NON; TMP; TIM	Fan mode during thermostatic control. NON : The fans remain ON all the time; TMP : Temperature-based control. The fans are ON when the compressor is ON. When the compressor is turned OFF, the fans remain ON as long as the temperature difference $T_e - T_a$ is greater than FDT. The fans are turned ON again with FDH differential. (T_e = Evaporator temperature, T_a = Air temperature); TIM : Timed-based control. The fans are ON when the compressor is ON. When the compressor is OFF, the fans switch ON and OFF according to parameters FT1, FT2, FT3
FDT	-12...0°	Evaporator-Air temperature difference for the fans to turn OFF after the compressor has stopped.
FDH	1...12°	Temperature differential for fan re-start.
		Example: FDT = -1, FDH=3. In this case, after the compressor has stopped, the fans are OFF when $T_e > T_a - 1$ (FDT), whereas the fans are ON when $T_e < T_a - 4$ (FDT-FDH).
FT1	0...180sec	Fan stop delay after compressor/heater stop. See Fig. 2
FT2	0...180	Timed fan stop in x10 seconds. With FT2=0 the fans remain on all the time.
FT3	0...180	Timed fan run in x10 seconds. With FT3=0, and FT2 > 0, the fans remain off all the time.
ATM	NON; ABS; REL	Alarm threshold management. NON : all temperature alarms are inhibited (the following parameter will be ACC). ABS : the values programmed in ALA and AHA represent the real alarm thresholds. REL : the alarm threshold is obtained by the sum of setpoint, thermostat differential and ALR/AHR.
ALA	-58... 180°	Low temperature alarm threshold.
AHA	-58... 180°	High temperature alarm threshold.
ALR	-12... 0°	Low temperature alarm differential. With ALR=0 the low temperature alarm is excluded.
AHR	0... 12°	High temperature alarm differential. With AHR=0 the high temperature alarm is excluded.
ATI	T1; T2; T3	Probe used for temperature alarm detection.
ATD	0... 120 min	Delay before alarm temperature warning.
ACC	0...52 weeks	Condenser periodic cleaning. When the compressor operation time, expressed in weeks, matches the ACC value programmed, "CL" flashes in the display. With ACC=0 the condenser cleaning warning is disabled and CND disappears from Info Menu.
IISM	NON; MAN; ECO; DI	Switchover mode to second parameter set NON : inhibition to use the second parameter group (the following parameter will be SB). MAN : button switches the two parameter groups over. ECO : automatic switchover to the second parameter group, when ECO conditions are detected. DI : switchover to the second parameter group when DIx input is on.
IISL	-58... IISH	Minimum limit for IISP setting.
IISH	IISL... 180°	Maximum limit for IISP setting.
IISP	IISL... IISH	Setpoint in mode 2.
IIHO	1... 10°	Thermostat OFF->ON differential in mode 2.

VI. CONTROL BASICS (continued)

PAR	RANGE	DESCRIPTION
IIH1	0... 10°	Thermostat ON->OFF differential in mode 2.
IIDF	0...250	Time interval among defrosts in mode 2 in x10 minutes.
IIFC	NON; TMP; TIM	Fan control in mode 2. See FCM.
ECS	1...5	Controller sensitivity for the automatic switchover from Group I to Group II (1=minimum, 5=maximum).
ECS	1...5	Controller sensitivity for the automatic switchover.
EPT	0...240 min	Eco pull-down time. Only with IISM=ECO. Group I parameters are used in regulation for at least EPT minutes. See Fig.3
SB	NO/YES	Stand-by button enabling.
DSM	NON; ALR; STP	Door switch input mode: NON : door switch inhibited ALR : when DIx=DOR and the digital input is on, an alarm is generated after ADO minutes STP : when DIx=DOR and the digital input is on, in addition to the alarm, the fans are immediately stopped and the compressor is stopped after CSD minutes.
DAD	0...30 min	Delay before door open alarm warning.
CSD	0...30 min	Compressor/heater stop delay after door has been opened.
D10	NON; DOR; ALR; IISM; RDS	DI1 digital input operation NON : digital input 1 not active. DOR : door input. ALR : when the input is on, an alarm is generated (if AHM=STP, the compressor is stopped and the defrosts are suspended). IISM : when the input is on, the controller will use group 2 parameters. RDS : when the input is on, a defrost is started (remote control).
D1A	OPN; CLS.	DI1 digital input activation. OPN : on open CLS : on close
D20	See D10	DI2 digital input operation. See D10.
D2A	OPN; CLS.	DI2 digital input activation. OPN : on open CLS : on close
PSL	-58...158	Minimum setpoint adjusted via potentiometer.
PSR	0...15	Range of setpoint adjusted via potentiometer.
LSM	NON; MAN; ECO; DI1; DI2; DI3.	Light control mode NON : light output not controlled. MAN : light output controlled through button (if OAx=LGT). ECO : lights activated/deactivated following the ECO state. DIx : lights activated/deactivated following the DIx state.
LSA	OPN; CLS	Light activation (only with LSM=ECO or LSM=DIx). OPN : lights on with DIx open or ECO mode deactivated. CLS : lights on with DIx closed or ECO mode activated.
OT1	0...600 sec	Activation time of OA1
OT2	0...600 sec	Pause between OA1 activation

VI. CONTROL BASICS (continued)

PAR	RANGE	DESCRIPTION
OA1	NON; LGT; 0-1; 2CU; 2EU; ALO; ALC	AUX 1 output operation NON : output disabled (always off). LGT : output enabled for light control. 0-1 : the relay contacts follow the on/standby state of controller. 2CU : output programmed for the control of an auxiliary compressor. 2EU : output enabled for the control of the electrical defrost of a second evaporator. ALO : contacts open when an alarm condition occurs. ALC : contacts make when an alarm condition occurs.
2CD	0...120 sec	Auxiliary compressor start delay. If OAx=2CU the auxiliary output is switched on with a delay of 2CD seconds after the main compressor has cut-in. Both compressors are turned off at the same time.
OS1	-12.5...12.5°	Probe T1 offset.
T2	NO/YES	Probe T2 enabling (evaporator).
OS2	-12.5...12.5°	Probe T2 offset.
T3	NON; DSP; CND; 2EU	Auxiliary probe T3 operation NON : probe T3 not fitted. DSP : temperature T3 to be displayed. CND : condenser temperature measurement. 2EU : second evaporator temperature measurement.
OS3	-12.5...12.5°	Probe 3 offset.
AHM	NON; ALR; STP;	Operation in case of high condenser alarm NON : high condenser alarm inhibited. ALR : in case of alarm, "HC" flashes in the display and the buzzer is switched on. STP : in addition to the alarm symbols displayed, the compressor is stopped and defrosts are suspended.
AHT	-50...110°	Condensation temperature alarm (referred to T3 probe).
TLD	1...30 min	Delay for minimum temperature (TLO) and maximum temperature (THI) logging.
TDS	T1; 1-2; T3	Selects the temperature probe to be displayed. T1 : probe T1 1-2 : the AVG-weighted average between T1 and T2 T3 : probe T3
AVG	0...100%	The relative weight of T2 on T1 (if TDS = 1-2) Example 1: T1 = -5°, T2 = -20°, AVG = 100%. The displayed temperature will be -20° (T1 has no effect) Example 2: T1 = -5°, T2 = -20°, AVG = 60%. The displayed temperature will be -14.
SCL	1°C; 2°C; °F	Readout scale. 1°C : measuring range -50...110°C (0.1°C resolution within -9.9 ÷ 19.9°C interval, 1°C outside) 2°C : measuring range -50 ... 110°C °F : measuring range -55 ... 180°F
SIM	0...100	Display slowdown.
ADR	1...255	TRL-002 address for PC communication.
NPR	0...1	Setup programmed.
STT	0...255	Setup traceability.

VI. CONTROL BASICS (continued)


VI. f - COMPONENTS AND WIRING DIAGRAM



Indications:

-  Thermostat output
-  Fan output
-  Defrost output
-  Activation of 2nd parameter set
-  Alarm
-  Manual activation / Increase button
-  Exit / Stand-by button

Control Wiring Diagram:

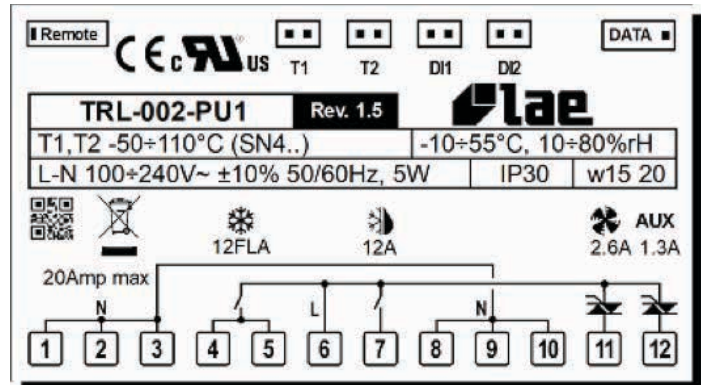

VII. TROUBLESHOOTING GUIDE

VII. a -TROUBLESHOOTING GUIDE

FIND YOUR PROBLEM HERE	REMEDY
1. Condensing unit fails to start.	a.Check if cord & plug has been disconnected. b.Check control temperature setting.
2. Condensing unit operates for prolonged periods or continuously.	a.Are doors closing properly? b.Dirty condenser or filter. Clean properly. c.Evaporator coil iced. Needs to defrost. See instructions for setting a manual defrost cycle on section VI.c.
3. Food compartment is too warm.	a.Check door(s) and gasket(s) for proper seal b.Perhaps a large quantity of warm food has recently been added or the door was kept open for a long period of time, in both cases, allow adequate time for the cabinet to recover its normal operating temperature. c.Control setting too high, readjust per instructions on section VI.b. d.Check that condensing coil is clean.
4. Food compartment is too cold.	a.Perhaps a large quantity of very cold or frozen food has recently been added. Allow adequate time for the cabinet to recover its normal operating temperature. b.Adjust the control to a warmer setting, see section VI.b.
5. Condensation on the exterior surface.	a.Check door alignment and gaskets for proper seal. b.Condensation on the exterior surface of the unit is perfectly normal during periods of high humidity.
6. Compressor hums but does not start.	a.Call for service.
7. No power to unit	a.Check if cord & plug has been disconnected. b.Check power supply breaker.

VIII. SERVICE/WARRANTY INFORMATION

VIII. a - SERVICE INFORMATION

Before calling for service, please check the following:

- ☐ Is the electrical cord plugged in?
- ☐ Is the fuse OK or circuit breaker on?
- ☐ Is the condenser coil clean?
- ☐ Is the power switch on?

If after checking the above items and the unit is still not operating properly, please contact an authorized Centerline by Traulsen service agent:

4401 Blue Mound Road Fort Worth, TX 76106
(800) 825-8220.

Centerline by Traulsen reserves the right to change specifications or discontinue models without notice.

VIII. b - SPARE PARTS INFORMATION

To purchase replacement parts or to speak to service support for Centerline by Traulsen units please contact our Ft. Worth facility by phone at 800-825-8220 or fax to 817-740-6748 (parts) or 817-740-6757 (service).

Note: When calling for spare parts or service support, please make sure you have model and serial number of unit available.

		4035 Bess Winwood Rd. Houston, TX 77066 800-825-4222																									
		Model Number Serial Number																									
<table border="1"> <tr> <td>MODEL NUMBER</td> <td>40722-02047-1-A-0</td> </tr> <tr> <td>LINE</td> <td>723-02047-1-A</td> </tr> </table>				MODEL NUMBER	40722-02047-1-A-0	LINE	723-02047-1-A																				
MODEL NUMBER	40722-02047-1-A-0																										
LINE	723-02047-1-A																										
RENUOVANT / RENOVANTES / RENOVANTEN																											
<table border="1"> <tr> <td>VEPS (IMPERM)</td> <td>40 000a</td> <td>8 000a</td> <td>2 000 000 (2 000 000 Lit)</td> </tr> <tr> <td>40 000a (IMPERM)</td> <td>100000</td> <td>10 000</td> <td>2 000 000 (2 000 000 Lit)</td> </tr> <tr> <td>40 000a (IMPERM)</td> <td>200 000a</td> <td>10 000a</td> <td>10 000a (10 000 Lit)</td> </tr> <tr> <td>VEPS (IMPERM)</td> <td>40 000a</td> <td>8 000a</td> <td>2 000 000 (2 000 000 Lit)</td> </tr> <tr> <td>40 000a (IMPERM)</td> <td>100000</td> <td>10 000</td> <td>2 000 000 (2 000 000 Lit)</td> </tr> <tr> <td>40 000a (IMPERM)</td> <td>200 000a</td> <td>10 000a</td> <td>10 000a (10 000 Lit)</td> </tr> </table>				VEPS (IMPERM)	40 000a	8 000a	2 000 000 (2 000 000 Lit)	40 000a (IMPERM)	100000	10 000	2 000 000 (2 000 000 Lit)	40 000a (IMPERM)	200 000a	10 000a	10 000a (10 000 Lit)	VEPS (IMPERM)	40 000a	8 000a	2 000 000 (2 000 000 Lit)	40 000a (IMPERM)	100000	10 000	2 000 000 (2 000 000 Lit)	40 000a (IMPERM)	200 000a	10 000a	10 000a (10 000 Lit)
VEPS (IMPERM)	40 000a	8 000a	2 000 000 (2 000 000 Lit)																								
40 000a (IMPERM)	100000	10 000	2 000 000 (2 000 000 Lit)																								
40 000a (IMPERM)	200 000a	10 000a	10 000a (10 000 Lit)																								
VEPS (IMPERM)	40 000a	8 000a	2 000 000 (2 000 000 Lit)																								
40 000a (IMPERM)	100000	10 000	2 000 000 (2 000 000 Lit)																								
40 000a (IMPERM)	200 000a	10 000a	10 000a (10 000 Lit)																								
Input Power (kW) - FOR INDOOR USE ONLY 1250 (2000000) - 12500 (2000000)																											
<table border="1"> <tr> <td>Optimized 1</td> <td>Optimized 2</td> <td>Optimized 3</td> <td>Optimized 4</td> </tr> <tr> <td>100 Safety / Other R</td> <td>100 Safety / Other R</td> <td>100 Safety / Other R</td> <td>100 Safety / Other R</td> </tr> </table>				Optimized 1	Optimized 2	Optimized 3	Optimized 4	100 Safety / Other R	100 Safety / Other R	100 Safety / Other R	100 Safety / Other R																
Optimized 1	Optimized 2	Optimized 3	Optimized 4																								
100 Safety / Other R	100 Safety / Other R	100 Safety / Other R	100 Safety / Other R																								
<table border="1"> <tr> <td>Optimized 5</td> <td>Optimized 6</td> <td>Optimized 7</td> <td>Optimized 8</td> </tr> <tr> <td>Optimized 5</td> <td>Optimized 6</td> <td>Optimized 7</td> <td>Optimized 8</td> </tr> </table>				Optimized 5	Optimized 6	Optimized 7	Optimized 8	Optimized 5	Optimized 6	Optimized 7	Optimized 8																
Optimized 5	Optimized 6	Optimized 7	Optimized 8																								
Optimized 5	Optimized 6	Optimized 7	Optimized 8																								
<table border="1"> <tr> <td>Optimized 9</td> <td>Optimized 10</td> <td>Optimized 11</td> <td>Optimized 12</td> </tr> <tr> <td>Optimized 9</td> <td>Optimized 10</td> <td>Optimized 11</td> <td>Optimized 12</td> </tr> </table>				Optimized 9	Optimized 10	Optimized 11	Optimized 12	Optimized 9	Optimized 10	Optimized 11	Optimized 12																
Optimized 9	Optimized 10	Optimized 11	Optimized 12																								
Optimized 9	Optimized 10	Optimized 11	Optimized 12																								
<table border="1"> <tr> <td>Optimized 13</td> <td>Optimized 14</td> <td>Optimized 15</td> <td>Optimized 16</td> </tr> <tr> <td>Optimized 13</td> <td>Optimized 14</td> <td>Optimized 15</td> <td>Optimized 16</td> </tr> </table>				Optimized 13	Optimized 14	Optimized 15	Optimized 16	Optimized 13	Optimized 14	Optimized 15	Optimized 16																
Optimized 13	Optimized 14	Optimized 15	Optimized 16																								
Optimized 13	Optimized 14	Optimized 15	Optimized 16																								
<table border="1"> <tr> <td>Optimized 17</td> <td>Optimized 18</td> <td>Optimized 19</td> <td>Optimized 20</td> </tr> <tr> <td>Optimized 17</td> <td>Optimized 18</td> <td>Optimized 19</td> <td>Optimized 20</td> </tr> </table>				Optimized 17	Optimized 18	Optimized 19	Optimized 20	Optimized 17	Optimized 18	Optimized 19	Optimized 20																
Optimized 17	Optimized 18	Optimized 19	Optimized 20																								
Optimized 17	Optimized 18	Optimized 19	Optimized 20																								
<table border="1"> <tr> <td>Optimized 21</td> <td>Optimized 22</td> <td>Optimized 23</td> <td>Optimized 24</td> </tr> <tr> <td>Optimized 21</td> <td>Optimized 22</td> <td>Optimized 23</td> <td>Optimized 24</td> </tr> </table>				Optimized 21	Optimized 22	Optimized 23	Optimized 24	Optimized 21	Optimized 22	Optimized 23	Optimized 24																
Optimized 21	Optimized 22	Optimized 23	Optimized 24																								
Optimized 21	Optimized 22	Optimized 23	Optimized 24																								
<table border="1"> <tr> <td>Optimized 25</td> <td>Optimized 26</td> <td>Optimized 27</td> <td>Optimized 28</td> </tr> <tr> <td>Optimized 25</td> <td>Optimized 26</td> <td>Optimized 27</td> <td>Optimized 28</td> </tr> </table>				Optimized 25	Optimized 26	Optimized 27	Optimized 28	Optimized 25	Optimized 26	Optimized 27	Optimized 28																
Optimized 25	Optimized 26	Optimized 27	Optimized 28																								
Optimized 25	Optimized 26	Optimized 27	Optimized 28																								
<table border="1"> <tr> <td>Optimized 29</td> <td>Optimized 30</td> <td>Optimized 31</td> <td>Optimized 32</td> </tr> <tr> <td>Optimized 29</td> <td>Optimized 30</td> <td>Optimized 31</td> <td>Optimized 32</td> </tr> </table>				Optimized 29	Optimized 30	Optimized 31	Optimized 32	Optimized 29	Optimized 30	Optimized 31	Optimized 32																
Optimized 29	Optimized 30	Optimized 31	Optimized 32																								
Optimized 29	Optimized 30	Optimized 31	Optimized 32																								
<table border="1"> <tr> <td>Optimized 33</td> <td>Optimized 34</td> <td>Optimized 35</td> <td>Optimized 36</td> </tr> <tr> <td>Optimized 33</td> <td>Optimized 34</td> <td>Optimized 35</td> <td>Optimized 36</td> </tr> </table>				Optimized 33	Optimized 34	Optimized 35	Optimized 36	Optimized 33	Optimized 34	Optimized 35	Optimized 36																
Optimized 33	Optimized 34	Optimized 35	Optimized 36																								
Optimized 33	Optimized 34	Optimized 35	Optimized 36																								
<table border="1"> <tr> <td>Optimized 37</td> <td>Optimized 38</td> <td>Optimized 39</td> <td>Optimized 40</td> </tr> <tr> <td>Optimized 37</td> <td>Optimized 38</td> <td>Optimized 39</td> <td>Optimized 40</td> </tr> </table>				Optimized 37	Optimized 38	Optimized 39	Optimized 40	Optimized 37	Optimized 38	Optimized 39	Optimized 40																
Optimized 37	Optimized 38	Optimized 39	Optimized 40																								
Optimized 37	Optimized 38	Optimized 39	Optimized 40																								
<table border="1"> <tr> <td>Optimized 41</td> <td>Optimized 42</td> <td>Optimized 43</td> <td>Optimized 44</td> </tr> <tr> <td>Optimized 41</td> <td>Optimized 42</td> <td>Optimized 43</td> <td>Optimized 44</td> </tr> </table>				Optimized 41	Optimized 42	Optimized 43	Optimized 44	Optimized 41	Optimized 42	Optimized 43	Optimized 44																
Optimized 41	Optimized 42	Optimized 43	Optimized 44																								
Optimized 41	Optimized 42	Optimized 43	Optimized 44																								
<table border="1"> <tr> <td>Optimized 45</td> <td>Optimized 46</td> <td>Optimized 47</td> <td>Optimized 48</td> </tr> <tr> <td>Optimized 45</td> <td>Optimized 46</td> <td>Optimized 47</td> <td>Optimized 48</td> </tr> </table>				Optimized 45	Optimized 46	Optimized 47	Optimized 48	Optimized 45	Optimized 46	Optimized 47	Optimized 48																
Optimized 45	Optimized 46	Optimized 47	Optimized 48																								
Optimized 45	Optimized 46	Optimized 47	Optimized 48																								
<table border="1"> <tr> <td>Optimized 49</td> <td>Optimized 50</td> <td>Optimized 51</td> <td>Optimized 52</td> </tr> <tr> <td>Optimized 49</td> <td>Optimized 50</td> <td>Optimized 51</td> <td>Optimized 52</td> </tr> </table>				Optimized 49	Optimized 50	Optimized 51	Optimized 52	Optimized 49	Optimized 50	Optimized 51	Optimized 52																
Optimized 49	Optimized 50	Optimized 51	Optimized 52																								
Optimized 49	Optimized 50	Optimized 51	Optimized 52																								
<table border="1"> <tr> <td>Optimized 53</td> <td>Optimized 54</td> <td>Optimized 55</td> <td>Optimized 56</td> </tr> <tr> <td>Optimized 53</td> <td>Optimized 54</td> <td>Optimized 55</td> <td>Optimized 56</td> </tr> </table>				Optimized 53	Optimized 54	Optimized 55	Optimized 56	Optimized 53	Optimized 54	Optimized 55	Optimized 56																
Optimized 53	Optimized 54	Optimized 55	Optimized 56																								
Optimized 53	Optimized 54	Optimized 55	Optimized 56																								
<table border="1"> <tr> <td>Optimized 57</td> <td>Optimized 58</td> <td>Optimized 59</td> <td>Optimized 60</td> </tr> <tr> <td>Optimized 57</td> <td>Optimized 58</td> <td>Optimized 59</td> <td>Optimized 60</td> </tr> </table>				Optimized 57	Optimized 58	Optimized 59	Optimized 60	Optimized 57	Optimized 58	Optimized 59	Optimized 60																
Optimized 57	Optimized 58	Optimized 59	Optimized 60																								
Optimized 57	Optimized 58	Optimized 59	Optimized 60																								
<table border="1"> <tr> <td>Optimized 61</td> <td>Optimized 62</td> <td>Optimized 63</td> <td>Optimized 64</td> </tr> <tr> <td>Optimized 61</td> <td>Optimized 62</td> <td>Optimized 63</td> <td>Optimized 64</td> </tr> </table>				Optimized 61	Optimized 62	Optimized 63	Optimized 64	Optimized 61	Optimized 62	Optimized 63	Optimized 64																
Optimized 61	Optimized 62	Optimized 63	Optimized 64																								
Optimized 61	Optimized 62	Optimized 63	Optimized 64																								
<table border="1"> <tr> <td>Optimized 65</td> <td>Optimized 66</td> <td>Optimized 67</td> <td>Optimized 68</td> </tr> <tr> <td>Optimized 65</td> <td>Optimized 66</td> <td>Optimized 67</td> <td>Optimized 68</td> </tr> </table>				Optimized 65	Optimized 66	Optimized 67	Optimized 68	Optimized 65	Optimized 66	Optimized 67	Optimized 68																
Optimized 65	Optimized 66	Optimized 67	Optimized 68																								
Optimized 65	Optimized 66	Optimized 67	Optimized 68																								
<table border="1"> <tr> <td>Optimized 69</td> <td>Optimized 70</td> <td>Optimized 71</td> <td>Optimized 72</td> </tr> <tr> <td>Optimized 69</td> <td>Optimized 70</td> <td>Optimized 71</td> <td>Optimized 72</td> </tr> </table>				Optimized 69	Optimized 70	Optimized 71	Optimized 72	Optimized 69	Optimized 70	Optimized 71	Optimized 72																
Optimized 69	Optimized 70	Optimized 71	Optimized 72																								
Optimized 69	Optimized 70	Optimized 71	Optimized 72																								
<table border="1"> <tr> <td>Optimized 73</td> <td>Optimized 74</td> <td>Optimized 75</td> <td>Optimized 76</td> </tr> <tr> <td>Optimized 73</td> <td>Optimized 74</td> <td>Optimized 75</td> <td>Optimized 76</td> </tr> </table>				Optimized 73	Optimized 74	Optimized 75	Optimized 76	Optimized 73	Optimized 74	Optimized 75	Optimized 76																
Optimized 73	Optimized 74	Optimized 75	Optimized 76																								
Optimized 73	Optimized 74	Optimized 75	Optimized 76																								
<table border="1"> <tr> <td>Optimized 77</td> <td>Optimized 78</td> <td>Optimized 79</td> <td>Optimized 80</td> </tr> <tr> <td>Optimized 77</td> <td>Optimized 78</td> <td>Optimized 79</td> <td>Optimized 80</td> </tr> </table>				Optimized 77	Optimized 78	Optimized 79	Optimized 80	Optimized 77	Optimized 78	Optimized 79	Optimized 80																
Optimized 77	Optimized 78	Optimized 79	Optimized 80																								
Optimized 77	Optimized 78	Optimized 79	Optimized 80																								
<table border="1"> <tr> <td>Optimized 81</td> <td>Optimized 82</td> <td>Optimized 83</td> <td>Optimized 84</td> </tr> <tr> <td>Optimized 81</td> <td>Optimized 82</td> <td>Optimized 83</td> <td>Optimized 84</td> </tr> </table>				Optimized 81	Optimized 82	Optimized 83	Optimized 84	Optimized 81	Optimized 82	Optimized 83	Optimized 84																
Optimized 81	Optimized 82	Optimized 83	Optimized 84																								
Optimized 81	Optimized 82	Optimized 83	Optimized 84																								
<table border="1"> <tr> <td>Optimized 85</td> <td>Optimized 86</td> <td>Optimized 87</td> <td>Optimized 88</td> </tr> <tr> <td>Optimized 85</td> <td>Optimized 86</td> <td>Optimized 87</td> <td>Optimized 88</td> </tr> </table>				Optimized 85	Optimized 86	Optimized 87	Optimized 88	Optimized 85	Optimized 86	Optimized 87	Optimized 88																
Optimized 85	Optimized 86	Optimized 87	Optimized 88																								
Optimized 85	Optimized 86	Optimized 87	Optimized 88																								
<table border="1"> <tr> <td>Optimized 89</td> <td>Optimized 90</td> <td>Optimized 91</td> <td>Optimized 92</td> </tr> <tr> <td>Optimized 89</td> <td>Optimized 90</td> <td>Optimized 91</td> <td>Optimized 92</td> </tr> </table>				Optimized 89	Optimized 90	Optimized 91	Optimized 92	Optimized 89	Optimized 90	Optimized 91	Optimized 92																
Optimized 89	Optimized 90	Optimized 91	Optimized 92																								
Optimized 89	Optimized 90	Optimized 91	Optimized 92																								
<table border="1"> <tr> <td>Optimized 93</td> <td>Optimized 94</td> <td>Optimized 95</td> <td>Optimized 96</td> </tr> <tr> <td>Optimized 93</td> <td>Optimized 94</td> <td>Optimized 95</td> <td>Optimized 96</td> </tr> </table>				Optimized 93	Optimized 94	Optimized 95	Optimized 96	Optimized 93	Optimized 94	Optimized 95	Optimized 96																
Optimized 93	Optimized 94	Optimized 95	Optimized 96																								
Optimized 93	Optimized 94	Optimized 95	Optimized 96																								
<table border="1"> <tr> <td>Optimized 97</td> <td>Optimized 98</td> <td>Optimized 99</td> <td>Optimized 100</td> </tr> <tr> <td>Optimized 97</td> <td>Optimized 98</td> <td>Optimized 99</td> <td>Optimized 100</td> </tr> </table>				Optimized 97	Optimized 98	Optimized 99	Optimized 100	Optimized 97	Optimized 98	Optimized 99	Optimized 100																
Optimized 97	Optimized 98	Optimized 99	Optimized 100																								
Optimized 97	Optimized 98	Optimized 99	Optimized 100																								

VIII. c - WARRANTY REGISTRATION:

The warranties for your new Traulsen unit may be registered with us by by completing warranty information online, via our website www.CenterlineFoodEquipment.com. Click on the Product Registration text at the footer of the home page. You may also register your product by calling us directly at 800-825-8220.

VIII. SERVICE/WARRANTY INFORMATION (continued)

VIII. d - WARRANTY STATEMENT:



TRAULSEN EQUIPMENT WARRANTY



U.S. Domestic Warranty

For sales of Traulsen refrigeration equipment ("Equipment") within the United States, Traulsen warrants to the original purchaser of the Equipment ("Purchaser") that Traulsen will convey the Equipment free and clear of all liens, security interests, and encumbrances created by, through or under Traulsen. Traulsen further warrants that for a period of three (3) years from the later of either (a) the date of delivery to the common carrier or (b) the date of installation (the "Domestic Warranty Period") but in no event, shall the Domestic Warranty Period commence later than 3 months from the date of delivery to the common carrier unless otherwise agreed upon by the parties in writing, under normal use and given proper installation and maintenance as determined by Traulsen, the Equipment: (a) will conform to the specifications as provided by Traulsen ("Specifications") and (b) will be free from substantial defects in material and workmanship.

The warranty period for compressors shall extend for an additional two (2) years beyond the Domestic Warranty Period. In the case of a nonconforming compressor, Traulsen shall provide a replacement compressor; however, all installation, recharging, and repair costs shall be the responsibility of Purchaser. In the case of a nonconforming part, Purchaser must return the part to Traulsen within 30 days from the date of repair. Failure to return a claimed defective part to Traulsen within the 30 days will waive the right to the warranty claim.

Additionally, Traulsen provides a lifetime warranty on the housing of cam-lift hinges and the workflow handles. In the case of a non-conforming housing for cam-lift hinge or workflow handle, Traulsen shall provide a replacement part; however, Purchaser shall be responsible for any other replacement costs, including but not limited to installation and labor.

The Domestic Warranty does not apply to: (a) consumable components or ordinary wear items; (b) components that are removable without the use of tools including but not limited to gaskets, shelf pins, and light bulbs; (c) use of the Equipment components or parts not supplied by Traulsen or specified by Traulsen in the Operator's Manual as set forth on Traulsen's website; or (d) damage resulting from fire, water, burglary, accident, abuse, misuse, transit, acts of God, terrorism, power surges, improper installation, or repairs or installation by unauthorized third parties. Additionally, the Equipment is intended only for commercial use and should not be used by consumers or households or in any non-commercial application. This Domestic Warranty does not apply to, and shall not cover, any Equipment that is installed or used in any way in any residential or non-commercial application. No warranties, express or implied, are provided to any residential, consumer or non-commercial purchaser or owner of the Equipment.

For Traulsen units purchased for use with a condenser provided by a third-party, this standard warranty will apply only to those components contained within the unit to the point of connection of the refrigeration lines leading to the third-party condenser.

In the event of a breach of the warranties set forth above (the "Domestic Warranty"), Traulsen will, at Traulsen's option and as Purchaser's sole remedy, repair or replace, including labor costs, any nonconforming Equipment, provided that (a) during the Warranty Period Traulsen is promptly notified in writing upon discovery of the nonconformance with a detailed explanation of any alleged deficiencies; (b) Traulsen is given a reasonable opportunity to investigate all claims; and (c) Traulsen's examination of any alleged defective part confirms such alleged deficiencies and that the deficiencies were not caused by misuse, neglect, improper installation, unauthorized alteration or repair or improper testing. Traulsen reserves the right to, at its request, require Purchaser shall ship the alleged defective part to Traulsen for inspection and confirmation of defect. No Equipment may be returned without Traulsen's approval.

Purchaser is solely responsible for determining if Equipment is fit for a particular purpose and suitable for Purchaser's application. Accordingly, and due to the nature and manner of Traulsen's Equipment, Traulsen is not responsible for the results or consequences of use, misuse, or application of its Equipment.

THIS DOMESTIC WARRANTY SETS FORTH THE EXTENT OF TRAULSEN'S LIABILITY FOR SALES WITHIN THE UNITED STATES. EXCEPT AS SET FORTH ABOVE, TRAULSEN MAKES NO WARRANTY OR REPRESENTATION OF ANY KIND, EXPRESS OR IMPLIED (INCLUDING NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE). IN NO EVENT WILL TRAULSEN'S LIABILITY IN CONNECTION WITH THE AGREEMENT OR SALE OF THE EQUIPMENT EXCEED THE PURCHASE PRICE OF THE EQUIPMENT AS TO WHICH THE CLAIM IS MADE. IN NO EVENT SHALL TRAULSEN BE LIABLE FOR ANY LOSS OF USE, LOSS OF PRODUCT, LOSS OF PROFIT, OR ANY OTHER INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THIS WARRANTY EVEN IF TRAULSEN HAS BEEN NOTIFIED OF THE POSSIBILITY OF SUCH DAMAGES.



TRAULSEN
4401 BLUE MOUND RD.
PHONE 1 (800) 825-8220
Website: www.traulsen.com

FT. WORTH, TX 76106
FAX-MKTG. 1 (817) 624-4302



4401 Blue Mound Road Fort Worth, Texas 76106 (USA)

Phone: 800.825.8220 | Service Fax: 817.740.6757 | E-mail: service@traulsen.com | Website: centerlinefoodequipment.com

Form Number: TR36231 | Part Number: 375-60363-00 | Revision Date: 06-09-20

Traulsen © All Rights Reserved